



Riscalda la vita.



UK

MADE IN ITALY
design & production

WOOD PRODUCTS USER MANUAL
VERONA XXL.16 MAIOLICA
VERONA XXL.16 PETRA






ATTENTION




**SURFACES CAN BECOME VERY HOT!
ALWAYS USE THE SAFETY GLOVE!**

During combustion, thermal energy is released that significantly increases the heat of surfaces, doors, handles, controls, glass, exhaust pipes, and even the front of the appliance. Avoid contact with those elements if not wearing protective clothing (safety glove supplied). Make sure children are aware of the danger and keep them away from the stove during operation.


ENGLISH	20
MANUFACTURER'S DECLARATION OF CONFORMITY	20
GENERAL NOTICES	20
SAFETY	20
ELECTRICAL CONNECTION	22
FIRE SAFETY	22
MINIMUM CLEARANCES	22
IN CASE OF FAULTS	23
FIRST-AID MEASURES	23
INSTALLATION REGULATIONS.....	24
MAINTENANCE PROVISIONS.....	24
VENTILATION AND AERATION OF THE INSTALLATION AREA	25
PERMITTED/NOT PERMITTED FUELS.....	27
CALCULATION OF THE HEAT OUTPUT	27
FLUE EXHAUST	28
FLUE PIPE.....	28
FLUE.....	28
SHARED CHIMNEY FLUE	30
CHIMNEY POT.....	30
DETAILS VERONA XXL.16 MAIOLICA	32
DETAILS VERONA XXL.16 STONE	33
TECHNICAL DESCRIPTION	34
IGNITION	36
PREPARING FOR IGNITION	36
LIGHT THE FIRE USING THE TRADITIONAL METHOD	36
LIGHT THE FIRE USING THE METHOD FROM ABOVE (RECOMMENDED).....	37
PROCEDURE TO ACHIEVE THE RATED HEAT OUTPUT.....	37
PREPARING THE BED OF EMBERS	37
LOADING INSTRUCTIONS TO ACHIEVE THE RATED HEAT OUTPUT.....	38
HOW TO CONFIGURE THE MACHINE FOR WATER BOILING	39
HOW TO CONFIGURE THE MACHINE FOR COOKIE BAKING.....	39
USING THE OVEN (IF PRESENT)	39
OPERATION AT HIGH OUTSIDE TEMPERATURES.....	40
MAINTENANCE AND CARE.....	41
REGULAR CLEANING UNDER THE USER'S RESPONSIBILITY	41
CLEANING THE GLASS	41
CLEANING THE ASH DRAWER.....	41
CLEANING THE FLUE.....	42
MAJOLICA (IF PRESENT).....	43
NATURAL STONE PRODUCTS (IF PRESENT)	43
PAINTED PRODUCTS (IF PRESENT)	43
ENAMELLED PRODUCTS (IF PRESENT).....	43
CHROME-PLATED COMPONENTS (IF PRESENT)	43
CLEANING THE FIREBOX GRATE.....	43
SIDE HANDRAIL (IF PRESENT).....	43
CAST IRON CENTRE PLATE AND RINGS.....	43
STAINLESS STEEL FRAME (IF PRESENT).....	44
STAINLESS STEEL COMPONENTS	44
OVEN MAINTENANCE (IF PRESENT)	44
CLEANING THE OVEN FLUE PASSAGE.....	44
REPLACING THE OVEN LAMP	45
SUMMER SHUTDOWN	45
CAUSES AND REMEDIES.....	45
DISPOSAL.....	46
ROUTINE MAINTENANCE PERFORMED BY QUALIFIED TECHNICIANS	46
GASKETS.....	46
CONNECTION TO THE CHIMNEY.....	46
SYMBOL EN 16510-1	47

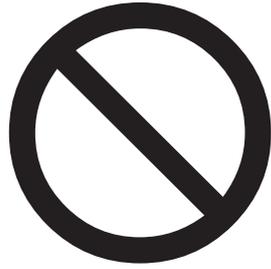

NO !

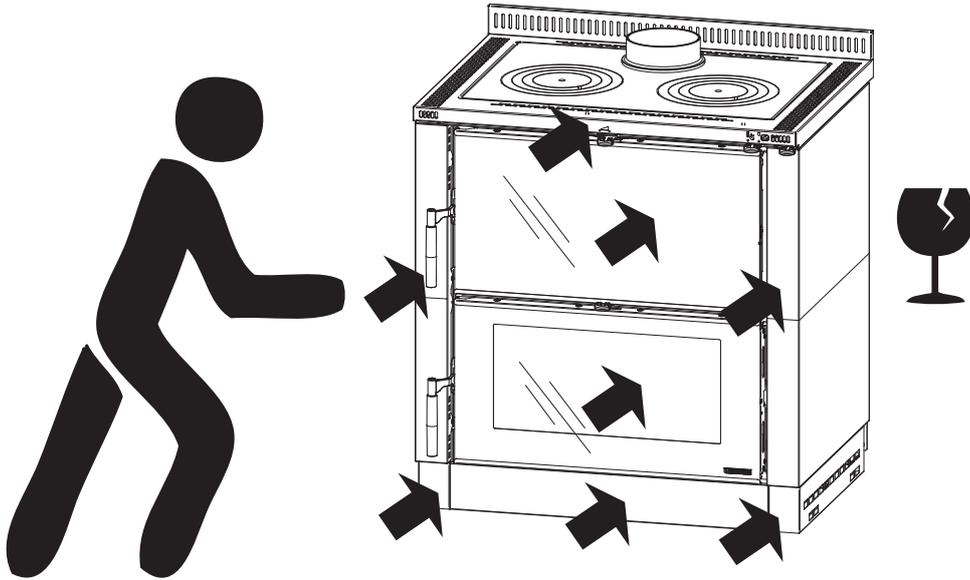

✓ OK


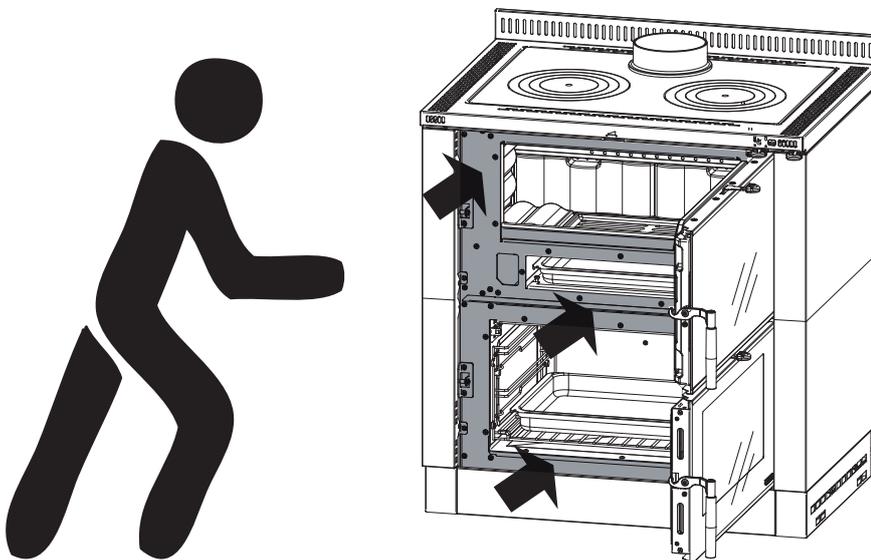


INSTALLAZIONE. INSTALLATION. INSTALLATION. L'INSTALLATION. LA INSTALACIÓN


PRIMA DELL'INSTALLAZIONE ESEGUIRE LE SEGUENTI VERIFICHE.
BEFORE THE INSTALLATION PERFORM THE FOLLOWING CHECKS.
VOR DER AUFSTELLUNG FOLGENDE PRÜFUNGEN AUSFÜHREN.
AVANT L'INSTALLATION IL FAUT RÉALISER LES SUIVANTES VÉRIFICATIONS
.ANTES DE LA INSTALACIÓN, REALIZAR LOS CONTROLES SIGUIENTES

Uscita fumi
 Smoke output
 Abgasaustritt
 Sortie de fumées
 Salida de humo

* Di Serie
 Seires
 Schon dabei
 Du Série
 Serie

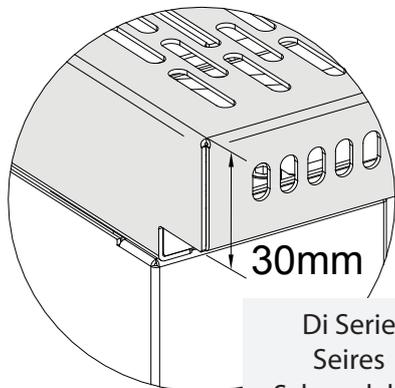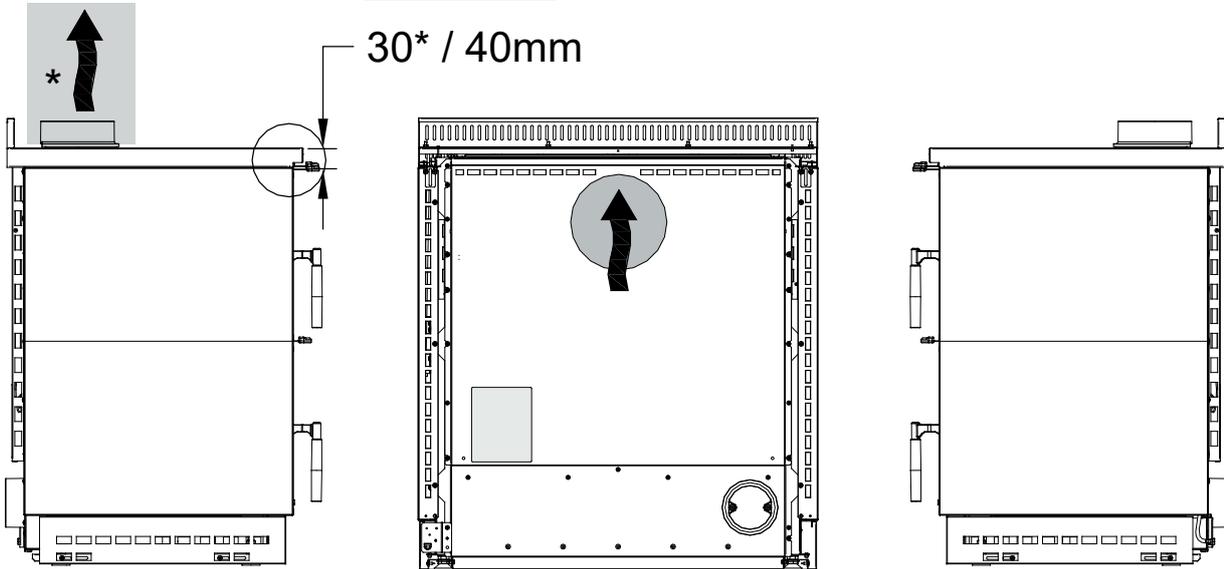


Di Serie
 Seires
 Schon dabei
 Du Série
 Serie


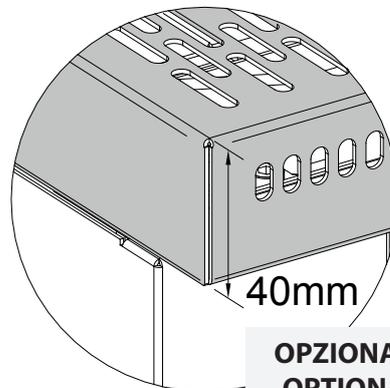


OPZIONALE
OPTIONAL
EXTRA
OPTIONNEL
OPCIONAL


**INSTALLAZIONE CORRIMANO
HANDRAIL INSTALLATION
HANDLAUF INSTALLATION
INSTALLATION DU MAIN COURANTE
INSTALACIÓN PASAMANO**

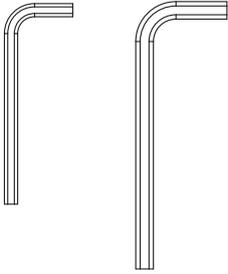


NON FORNITO
NOT SUPPLIED
NICHT IM LIEFERUMFANG
PAS FOURNIS
NO SUMINISTRADO

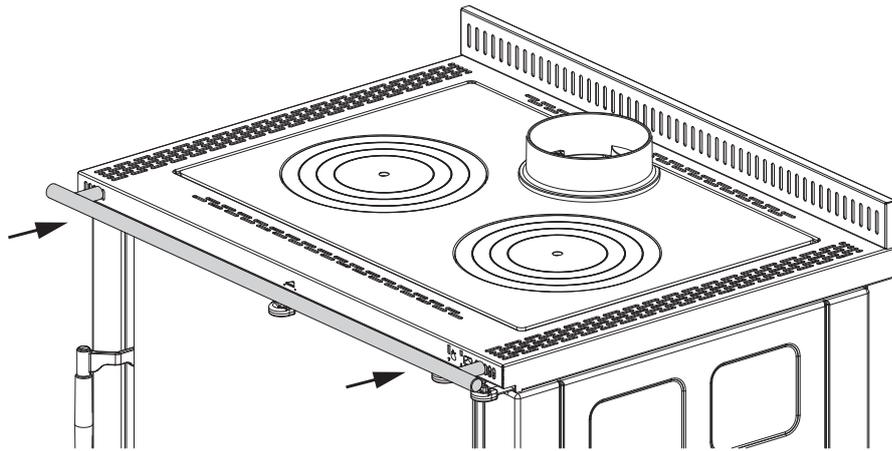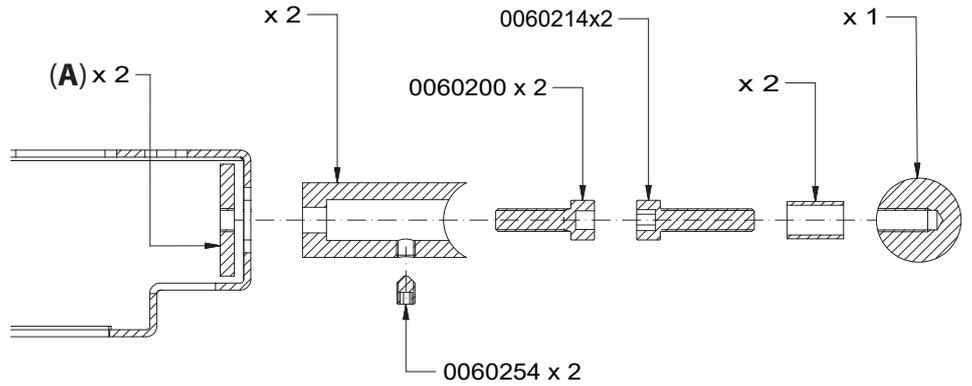


1

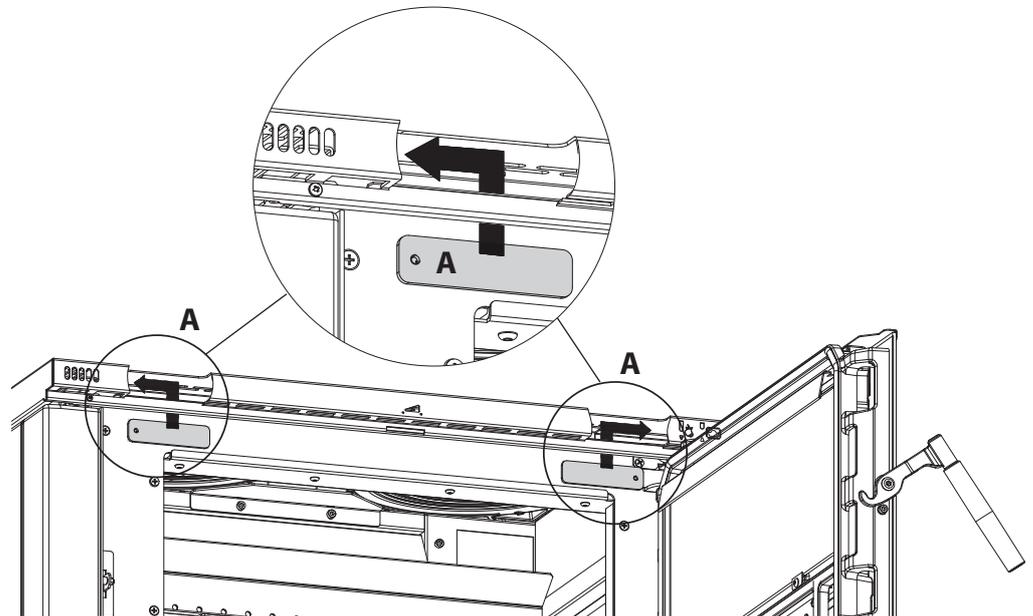



2

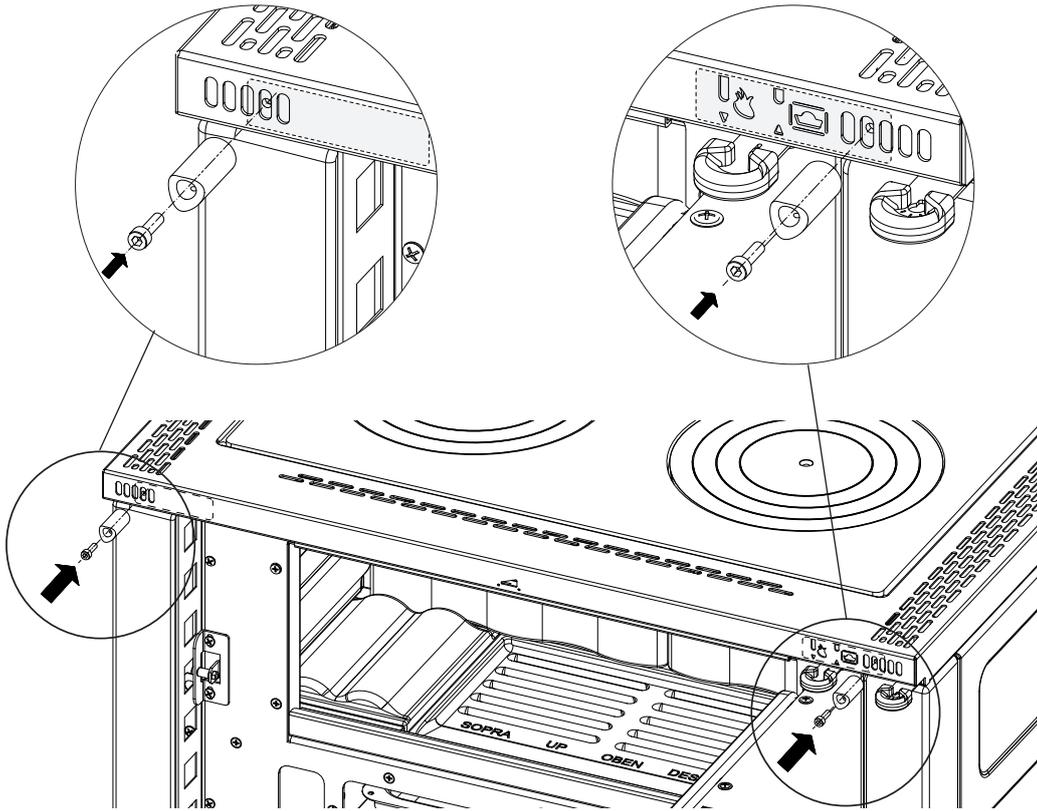





3

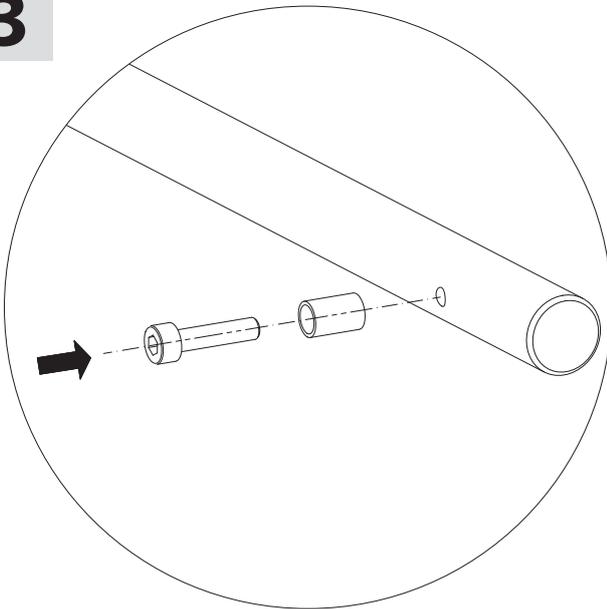


4

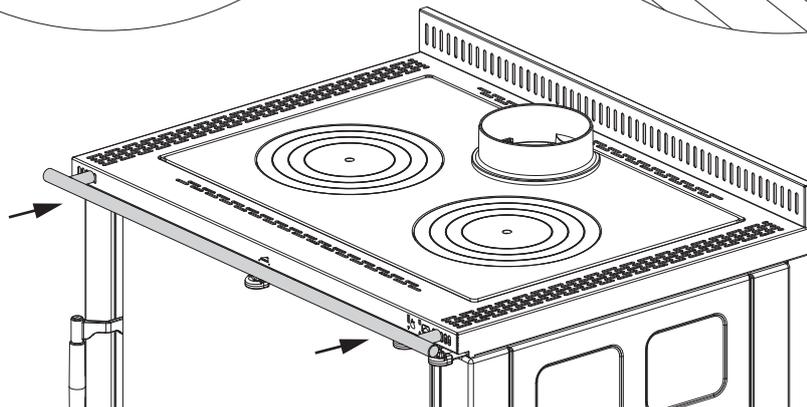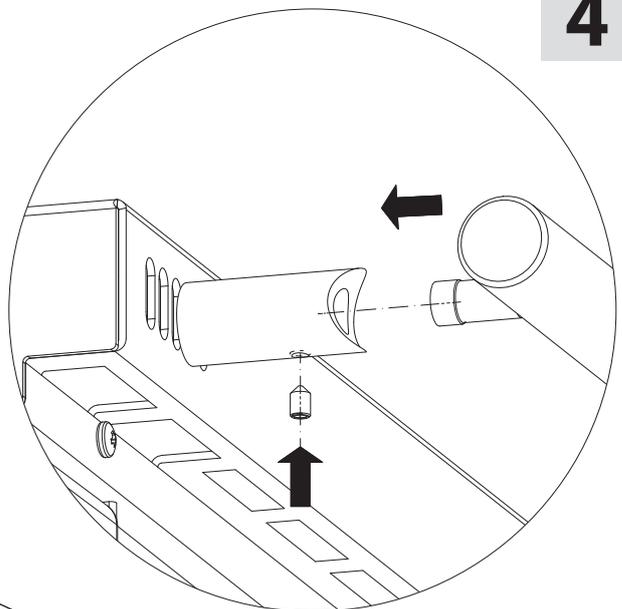


**LIVELLAMENTO E ALLINEAMENTO DELLA CUCINA
 LEVELLING AND ALIGNMENT OF THE COOKER
 NIVELLIERUNG UND AUSRICHTUNG DES HERDES
 NIVELLEMENT ET ALIGNEMENT DE LA CUISINIÈRE
 NIVELACIÓN Y ALINEACIÓN DE LA COCINA**

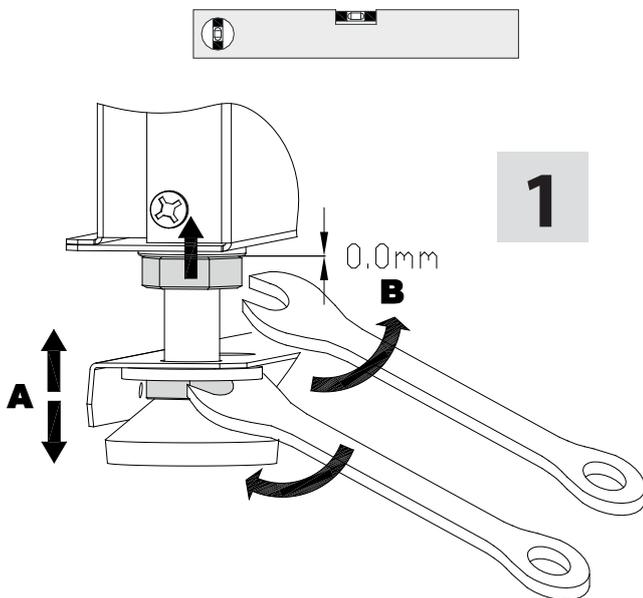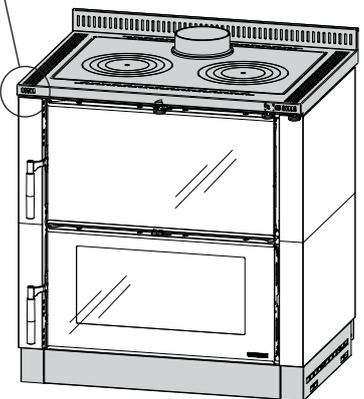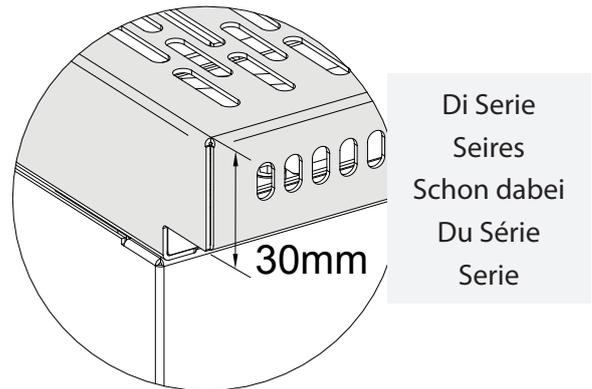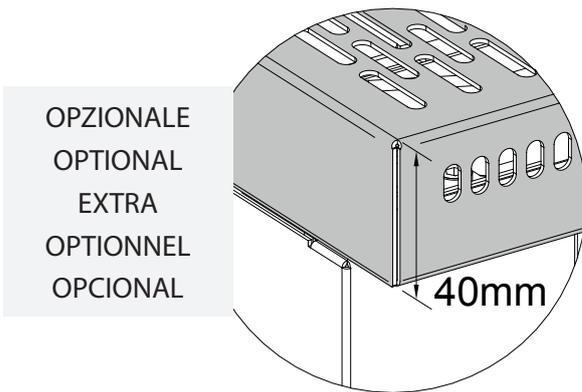


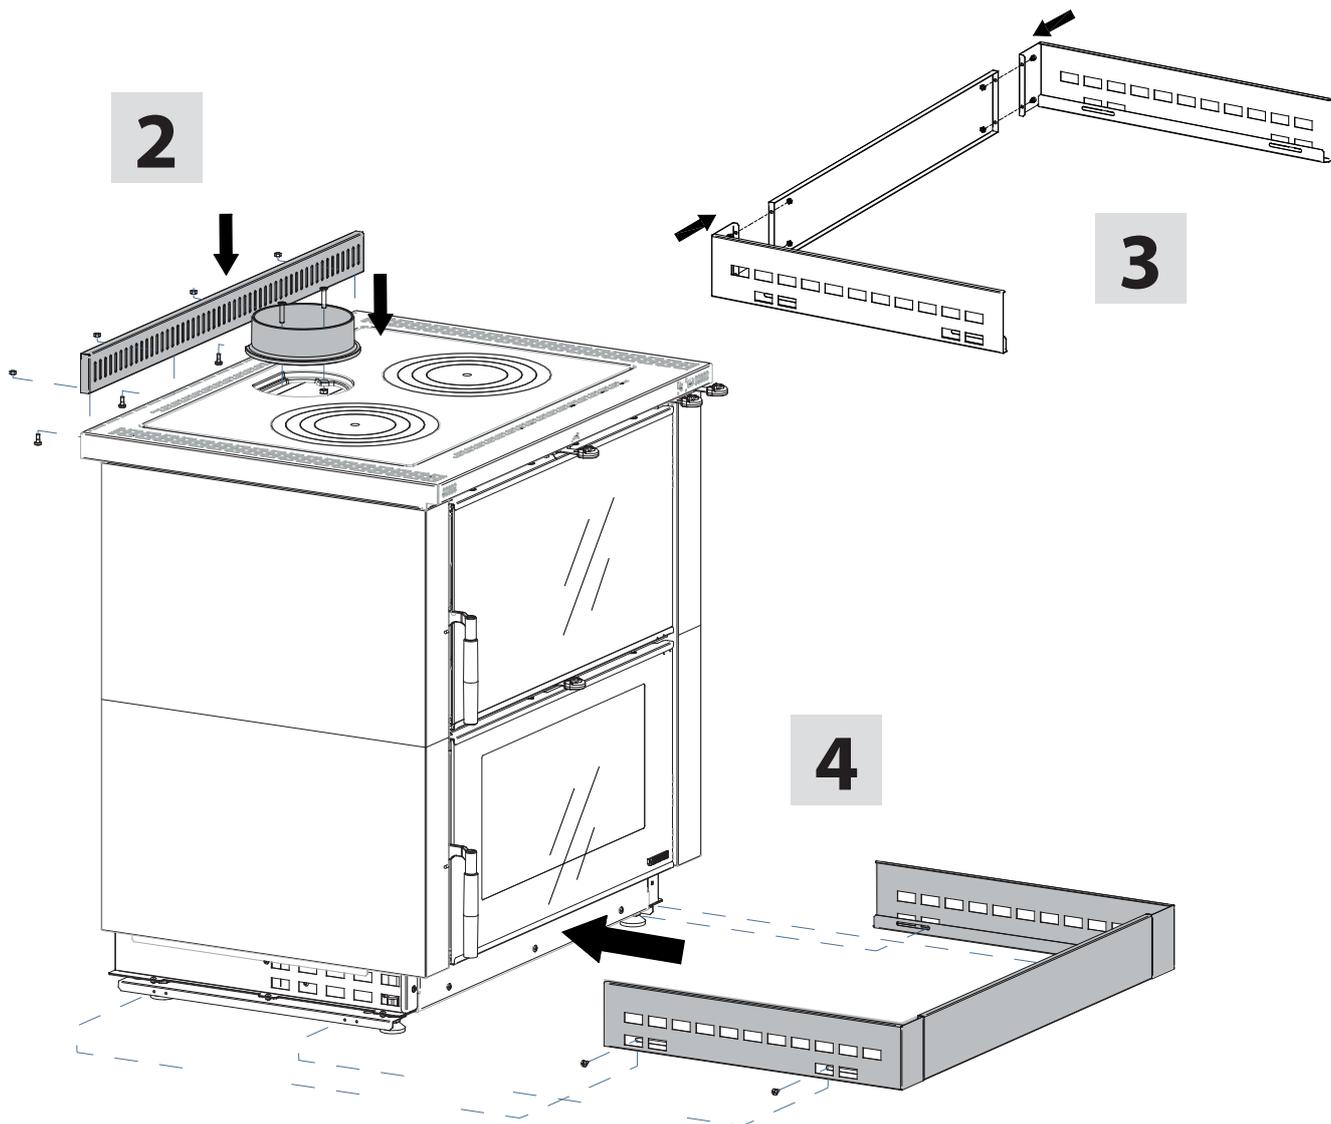


**SCARICO FUMI POSTERIORE
REAR EXHAUST SMOKE OUTLET
HINTERER RAUCHROHRANSCHLUSS
SORTIES DES FUMÉES A L'ARRIÈRE
SALIDA DE HUMO POSTERIOR**

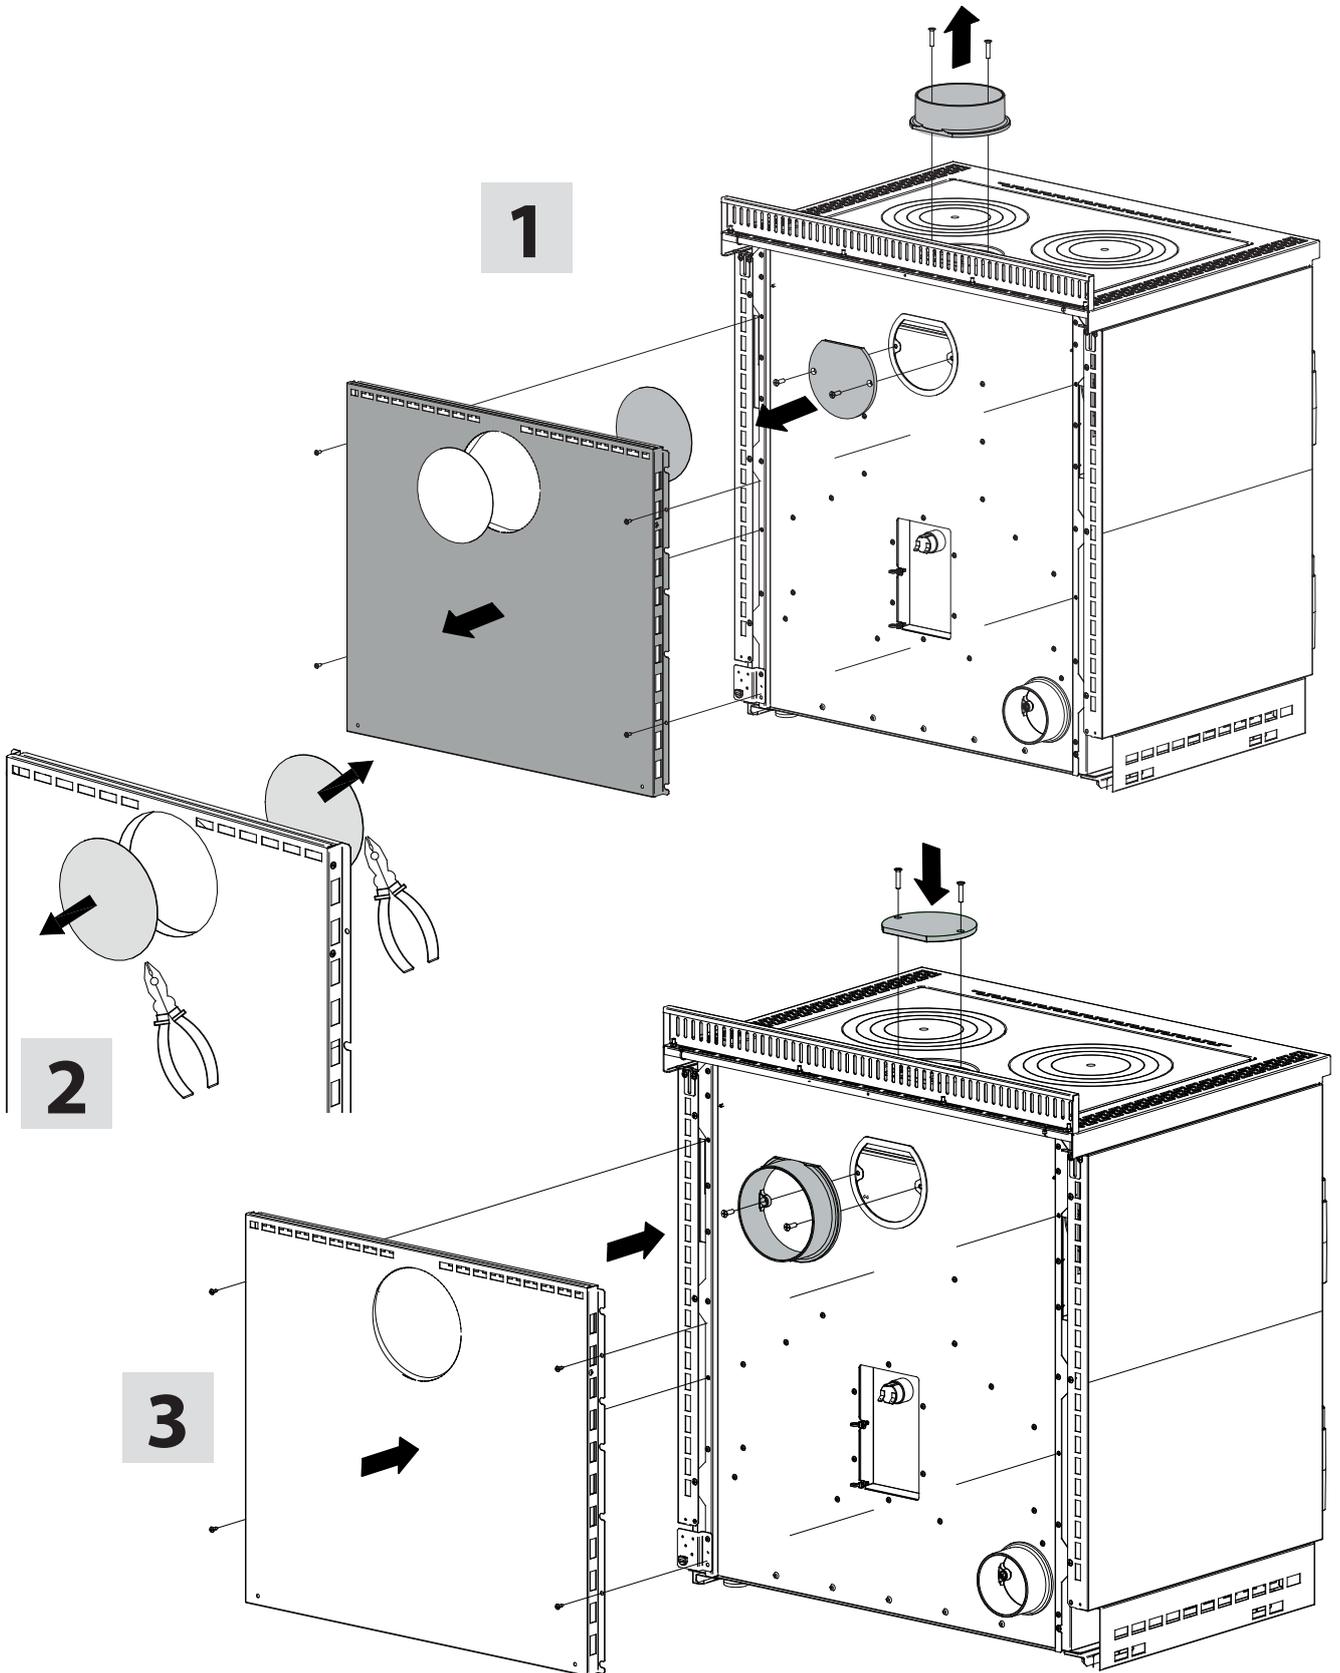


**INVERSIONE PORTE
REVERSING OF THE DOORS
UMKEHR DER TÜREN
INVERSION DES PORTES
INVERSIÓN DE LAS PUERTAS**

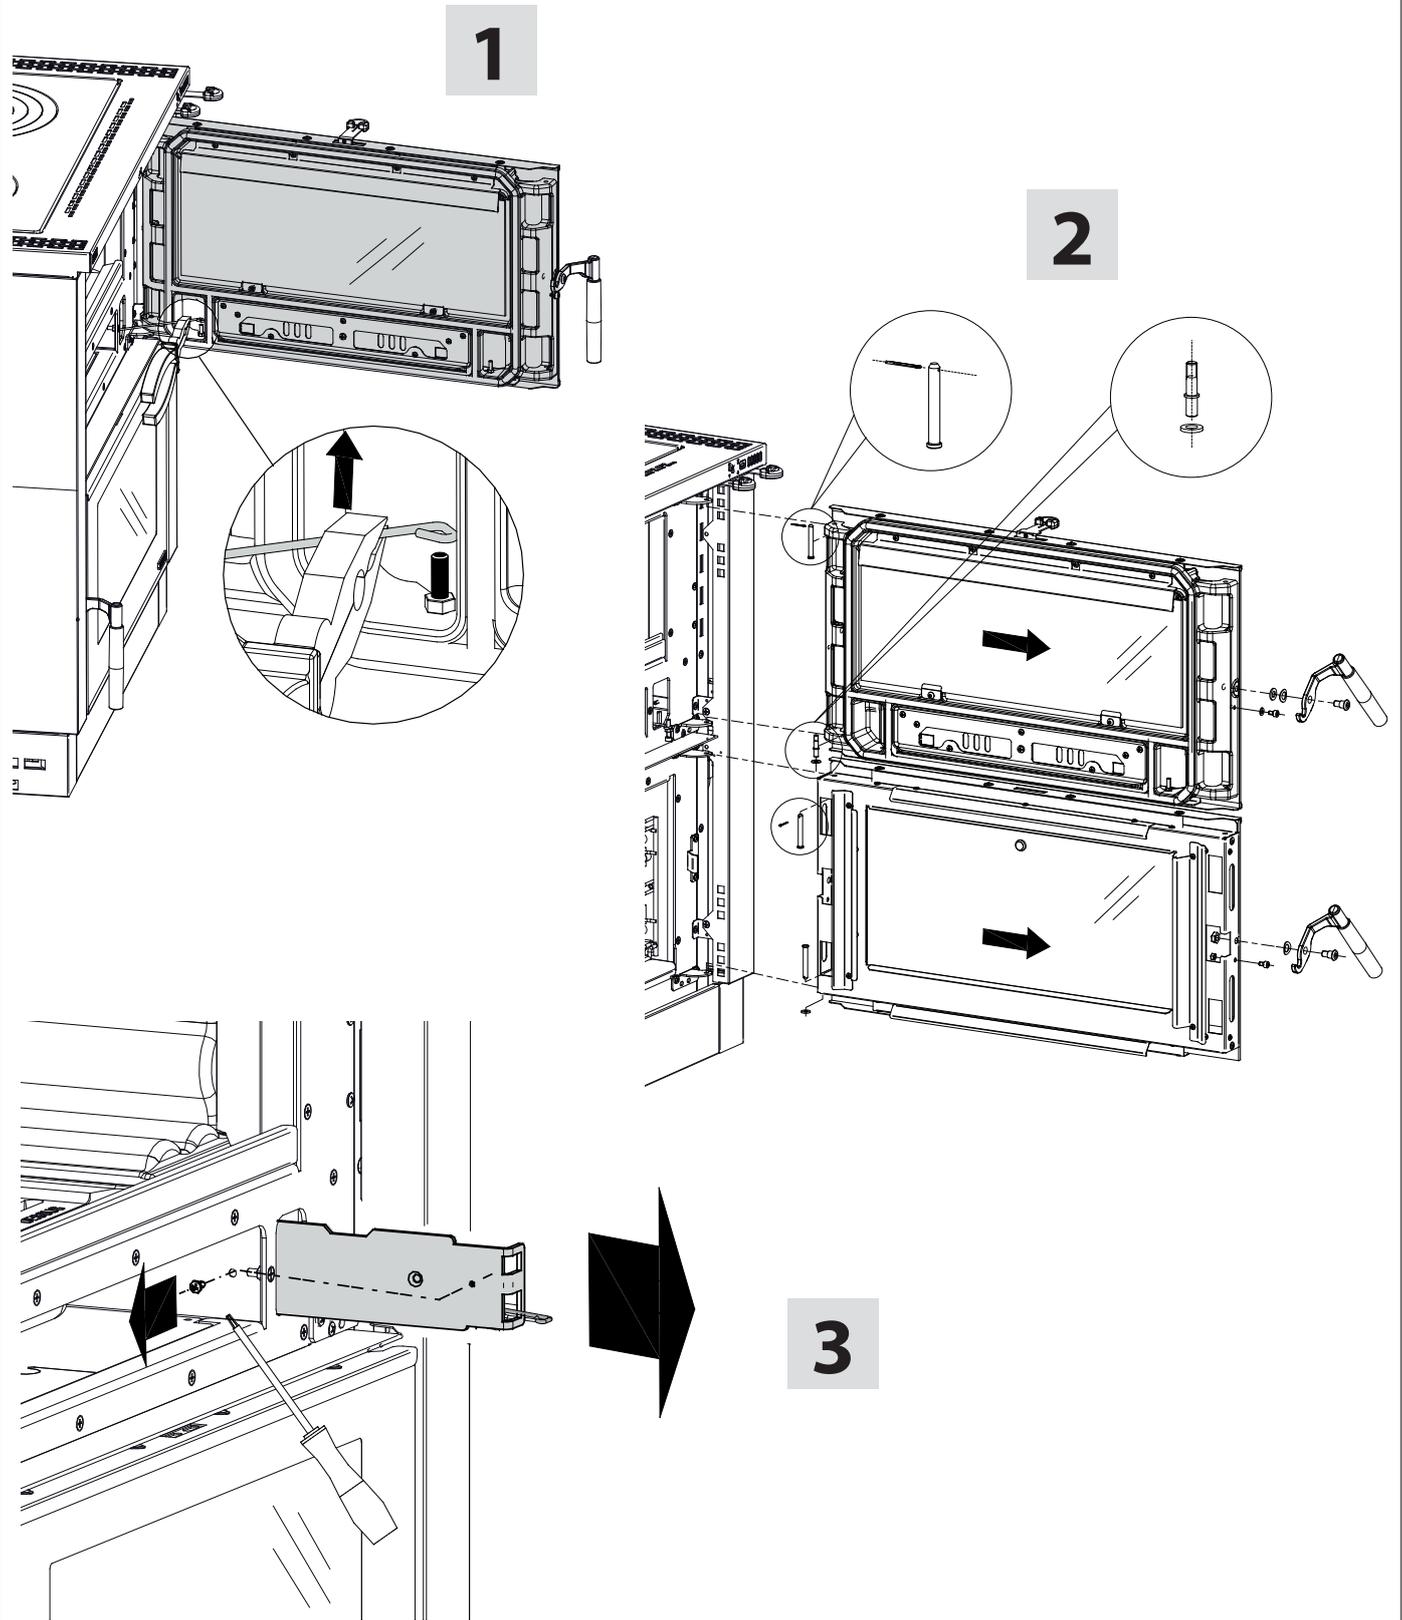


180°
RUOTARE
ROTATE
DREHEN
TOURNER
GIRAR

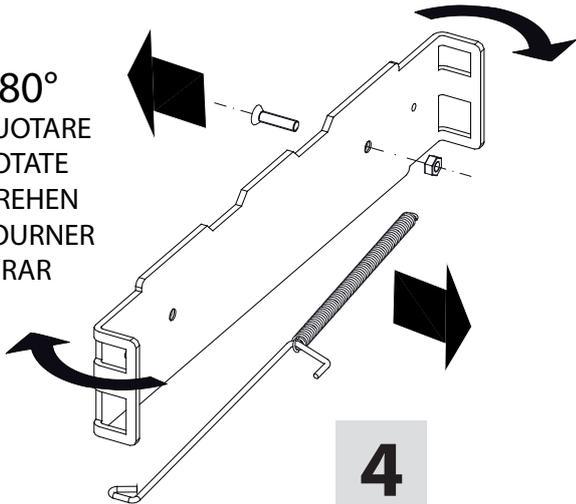



4

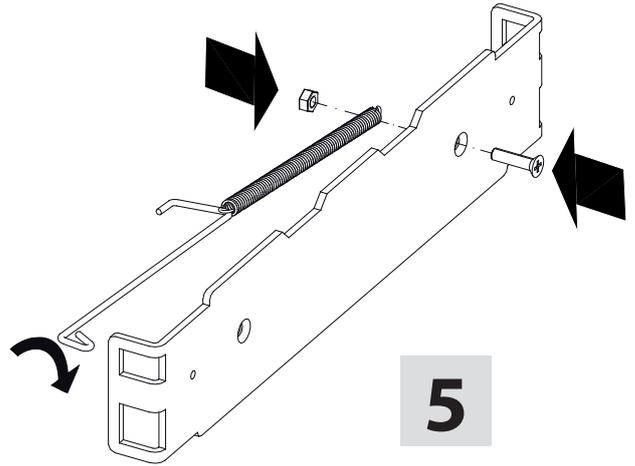


5





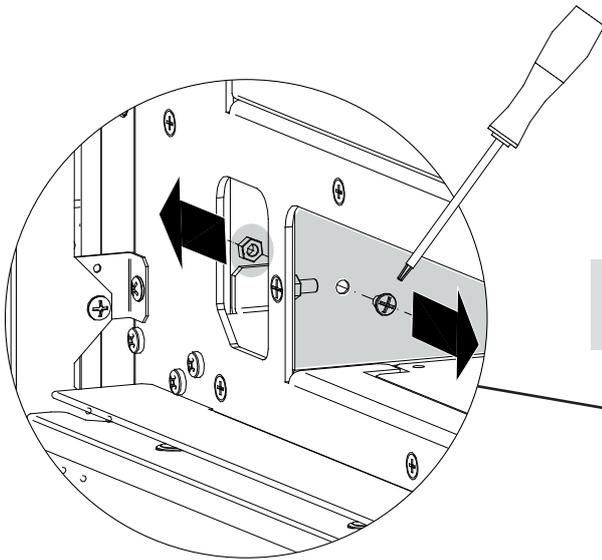



6

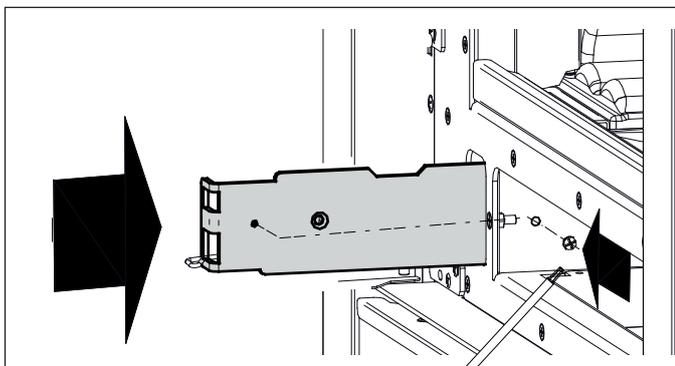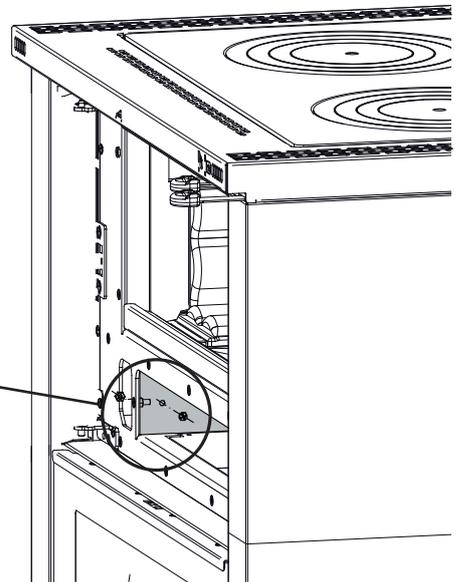


7

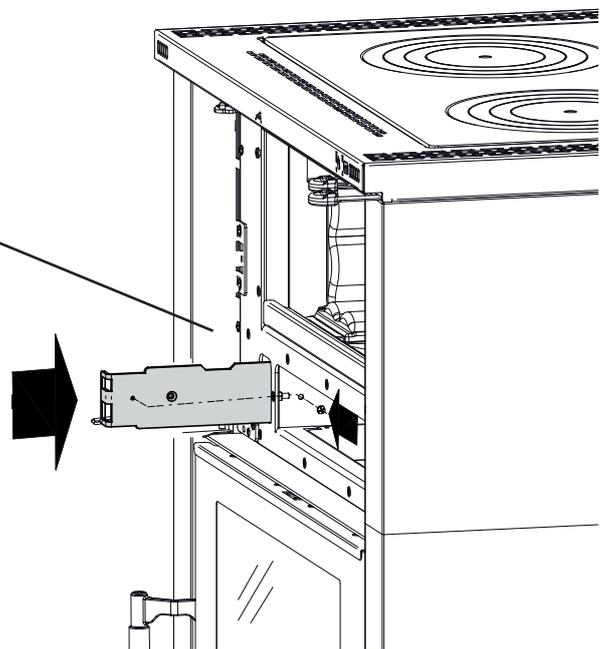

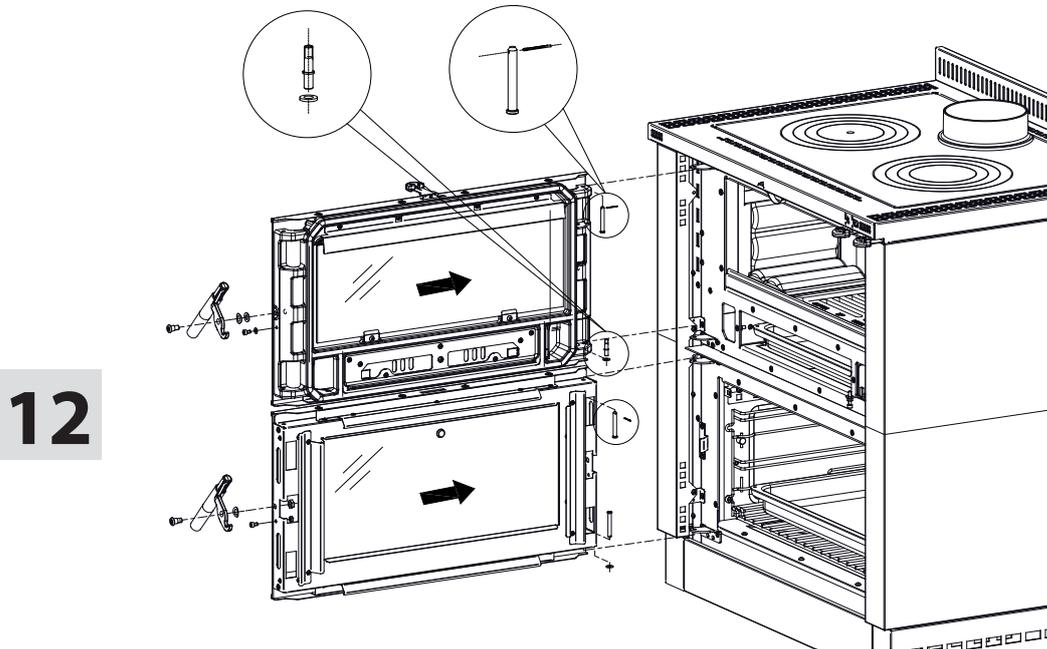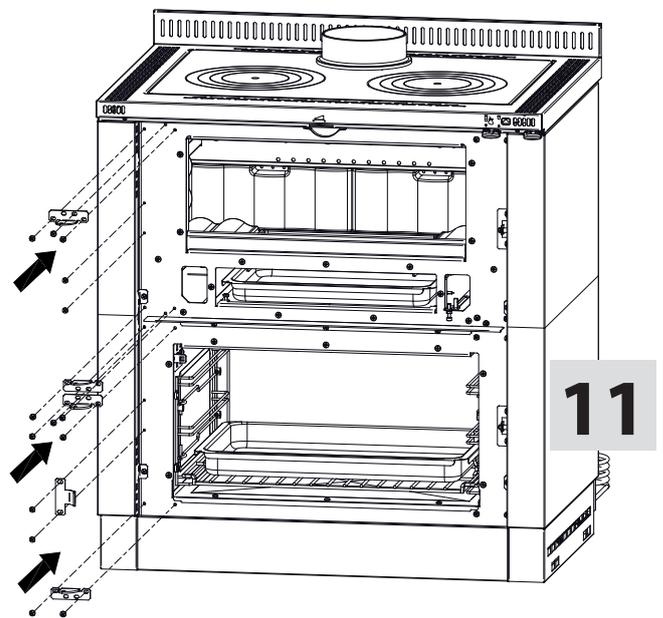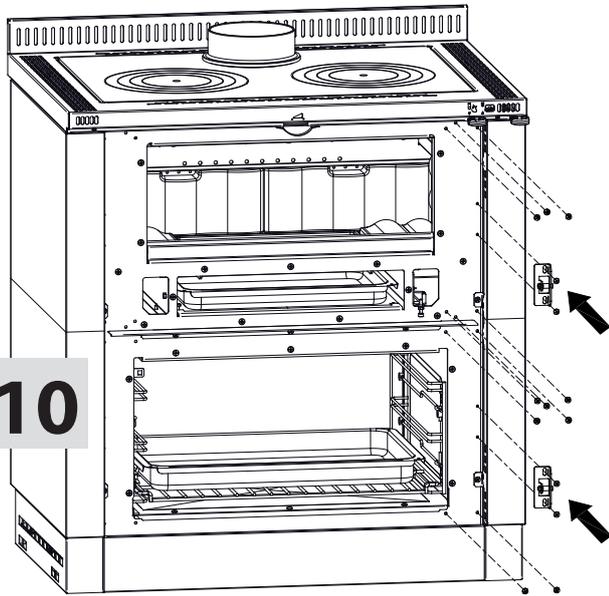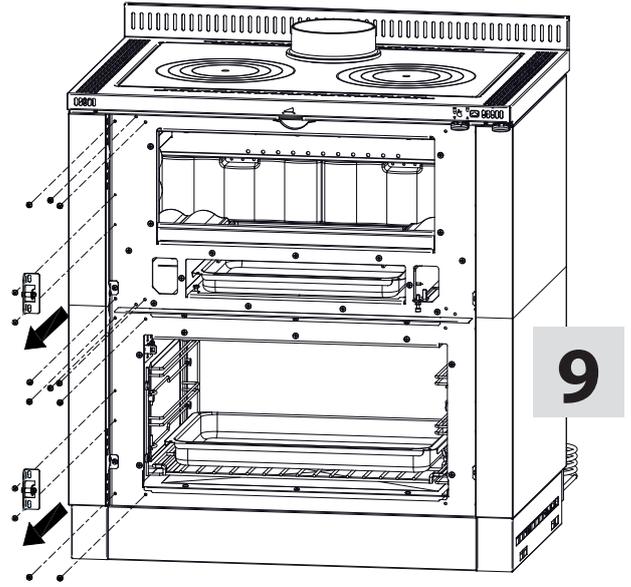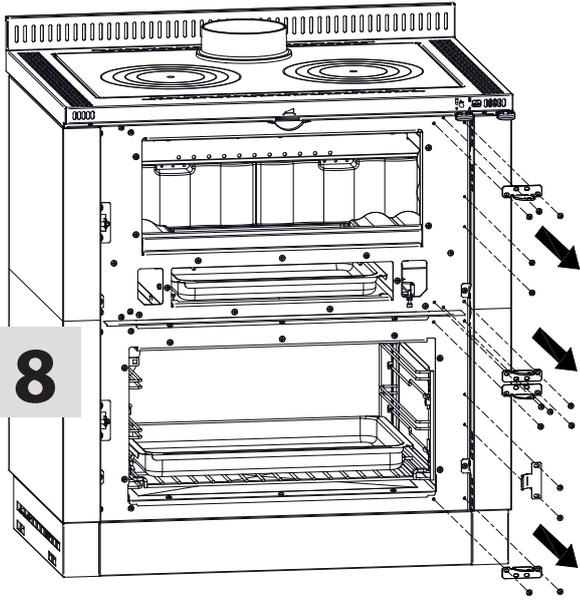

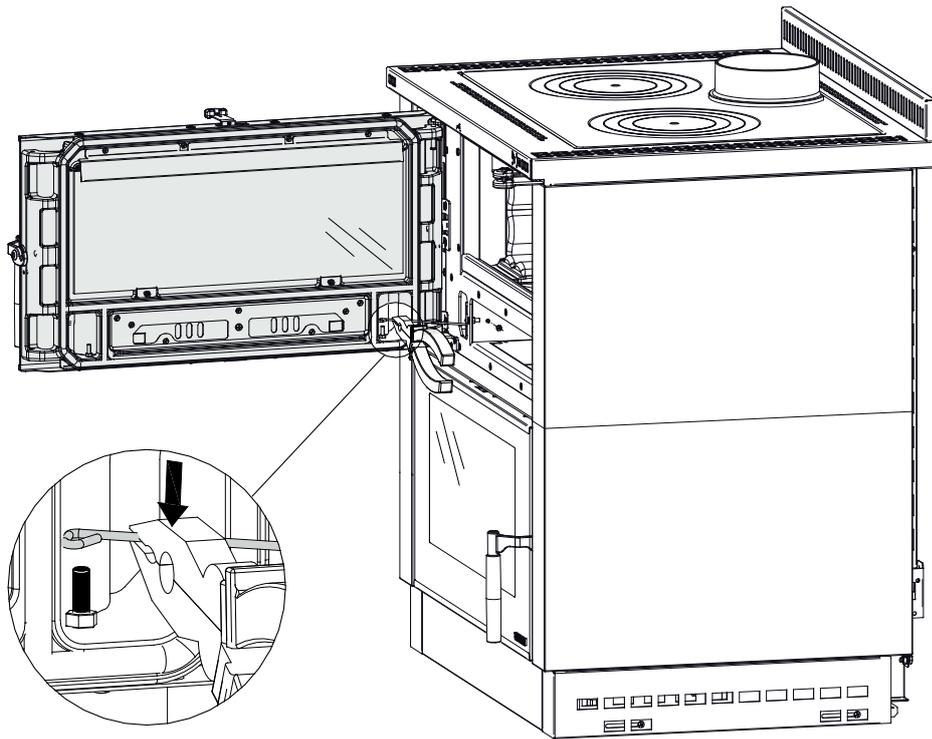


13

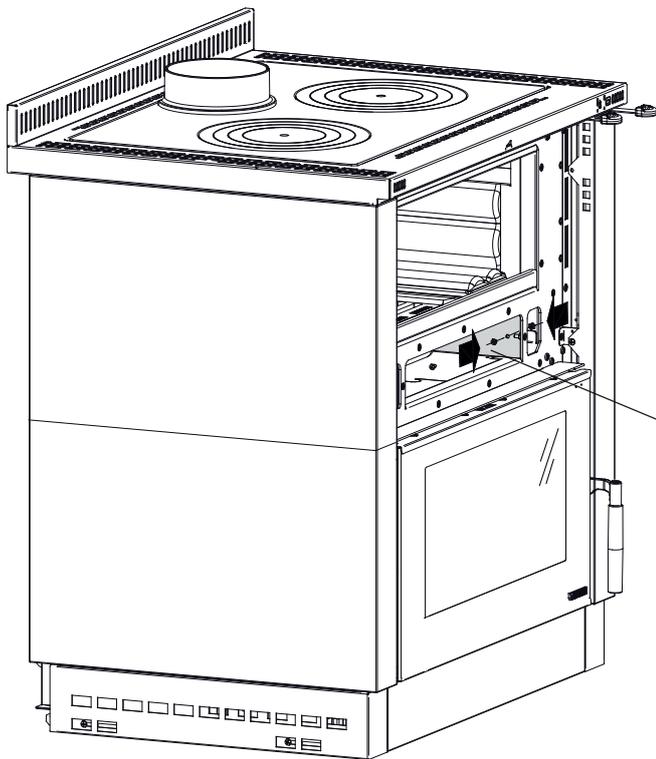




14

GUIDE SCORREVOLI PER GRIGLIA FORNO - POSIZIONAMENTO
SLIDING GUIDES FOR OVEN GRILL - POSITIONING
GLEITFÜHRUNGEN FÜR OFENROST - POSITIONIERUNG
GUIDES COULISSANTS POUR GRILLE DE FOUR - POSITIONNEMENT
GUÍAS DESLIZANTES PARA PARRILLA DE HORNO - POSICIONAMIENTO

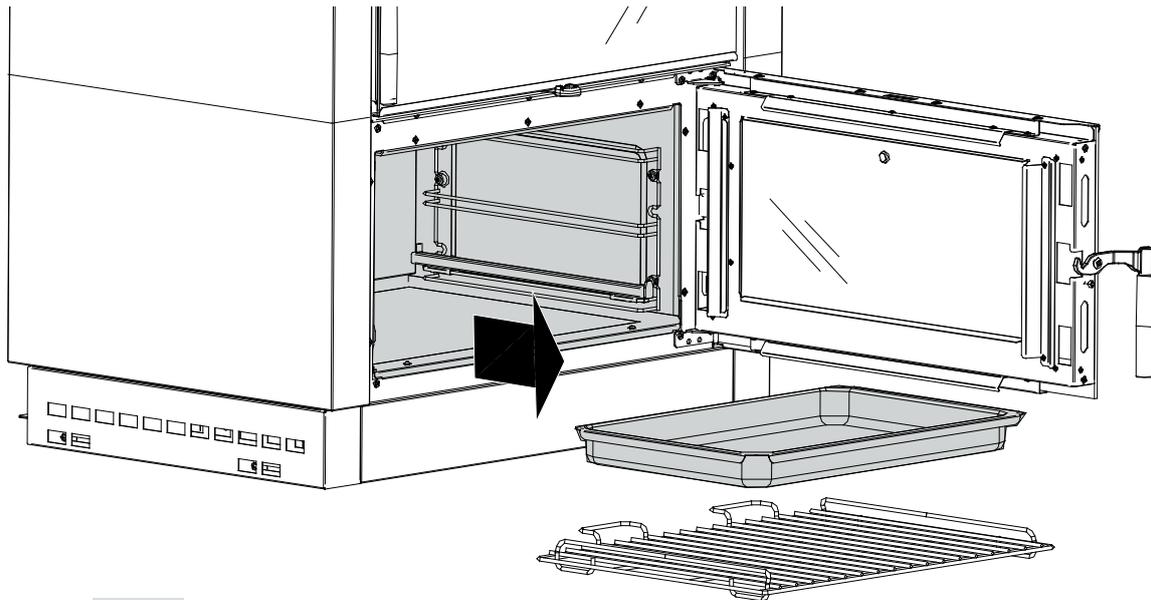
**1**

CARICO MASSIMO 10 kg
MAXIMUM LOAD 10 kg
MAXIMALE LAST 10 kg
CHARGE MAXIMALE 10 kg
CARGA MÁXIMA 10 kg

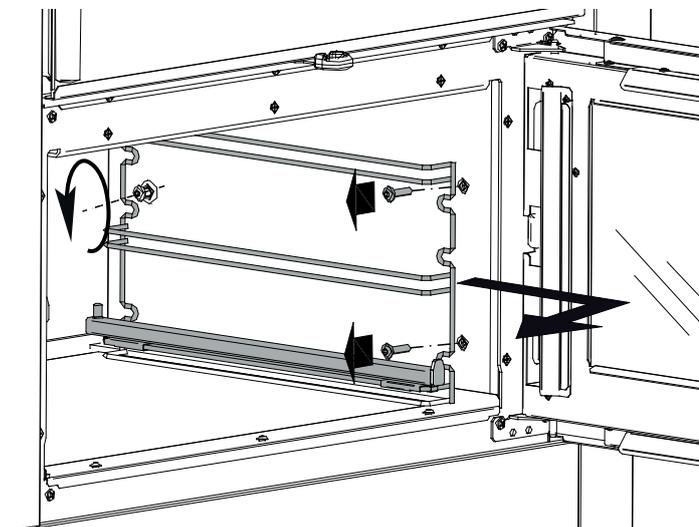
2

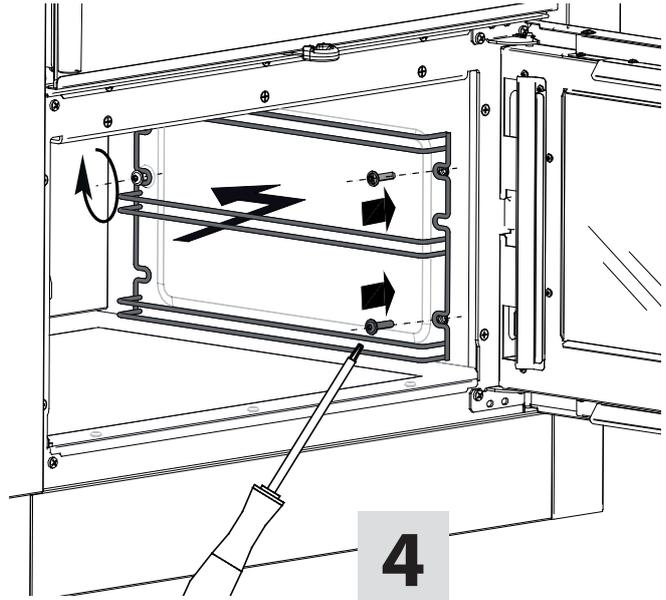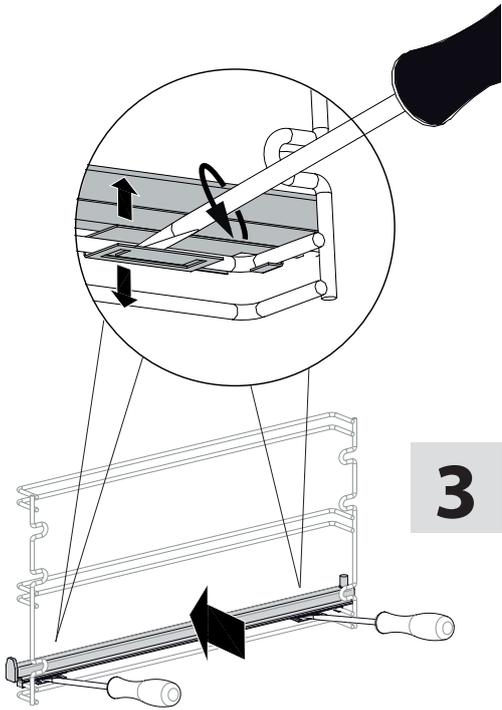


5

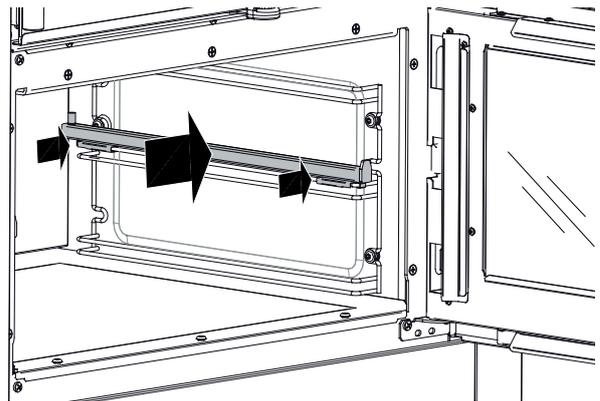


MAX. 10 kg

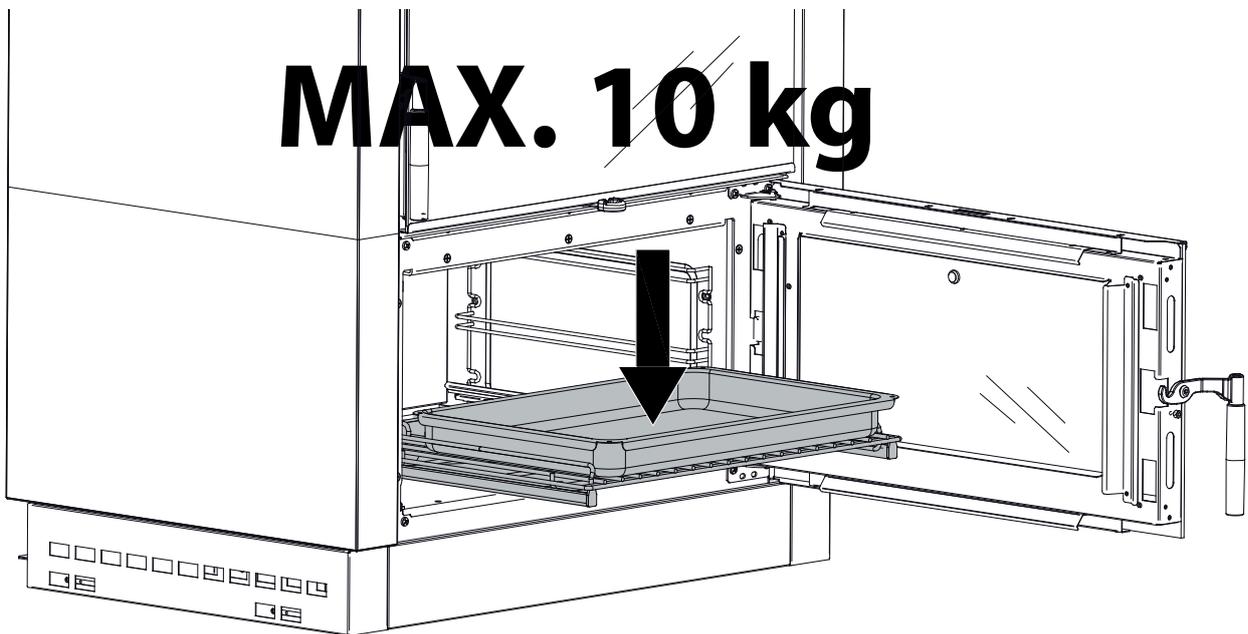


**SMONTAGGIO DELLE MAIOLICHE
REMOVAL OF MAJOLICA TILES
AUSBAU DER KERAMIKVERKLEIDUNG
DÉMONTAGE DES FAÏENCES
EXTRACCIÓN DE MAYÓLICAS**

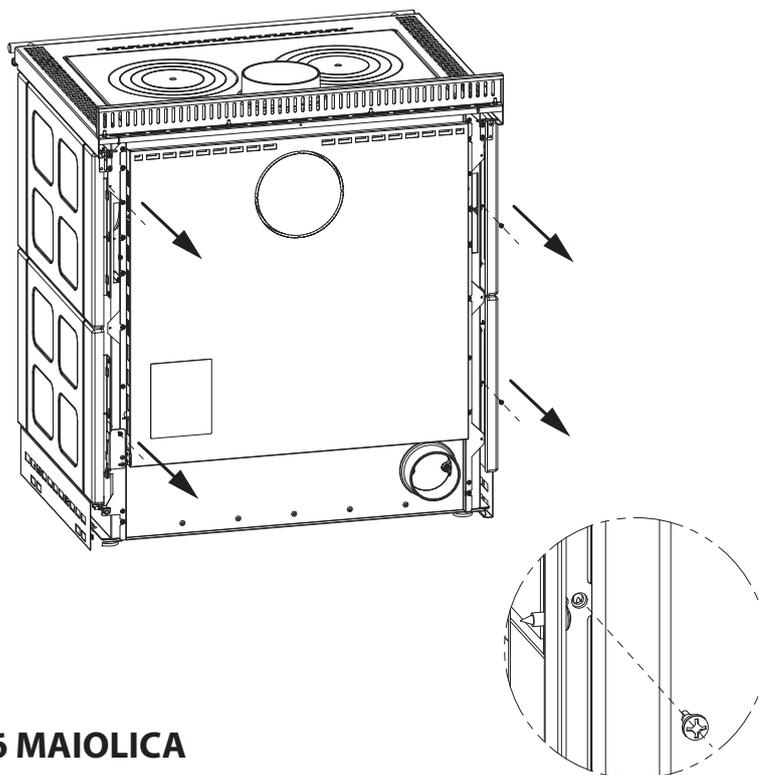


VERONA XXL.16 MAIOLICA

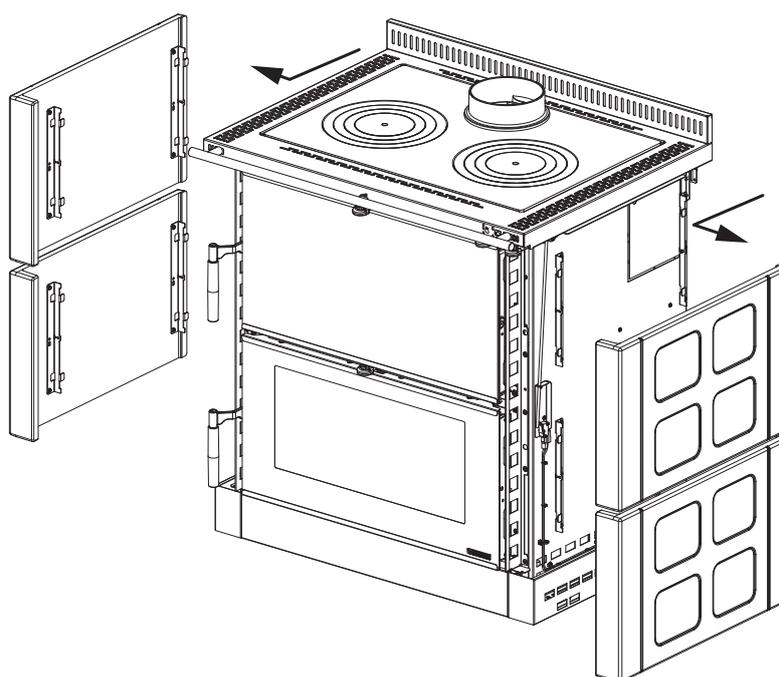

**SMONTAGGIO DELLE PIETRE NATURALI
REMOVAL OF NATURAL STONES
AUSBAU DER NATÜRLICHEN STEINEN
DÉMONTAGE DES PIERRES NATURELLES
EXTRACCIÓN DE PIEDRAS NATURALES**



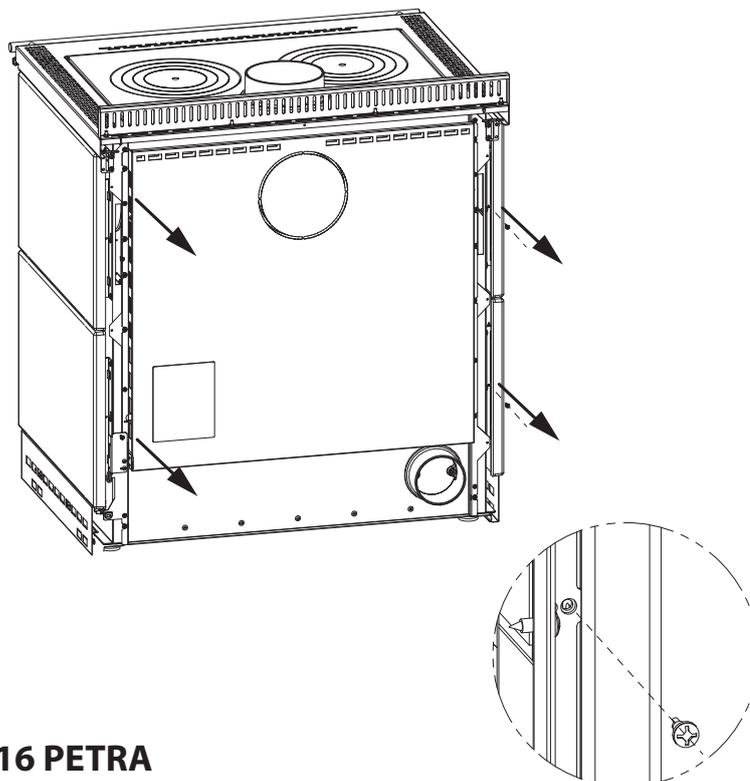


VERONA XXL.16 PETRA

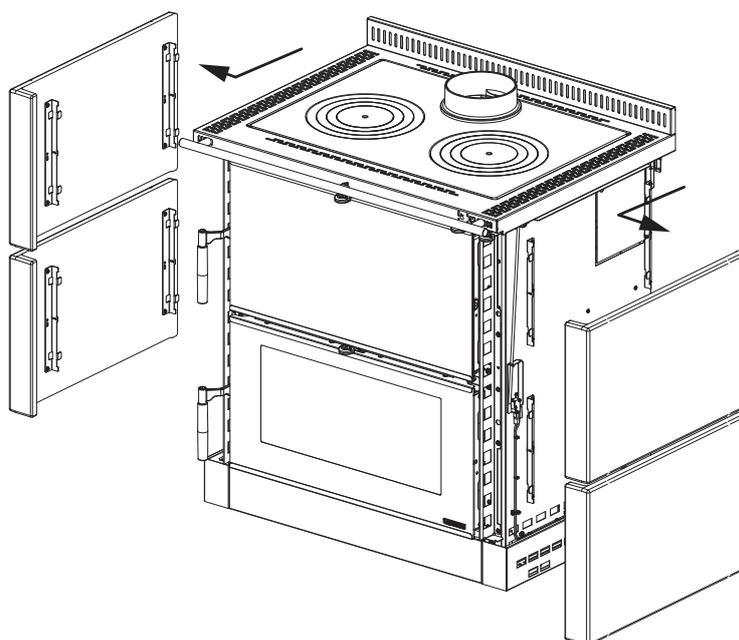

**SOSTITUZIONE LAMPADA DEL FORNO
REPLACING THE OVEN LAMP
REPLACEMENT DE LA LAMPE DU FOUR
AUSTAUSCH DER OFENLAMPE
SUSTITUIR LA LÁMPARA DEL HORNO**

Lamp **G9**
25W 230V

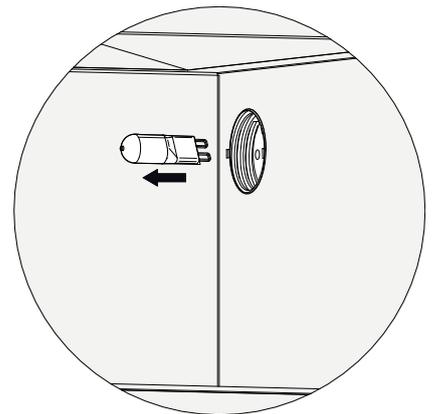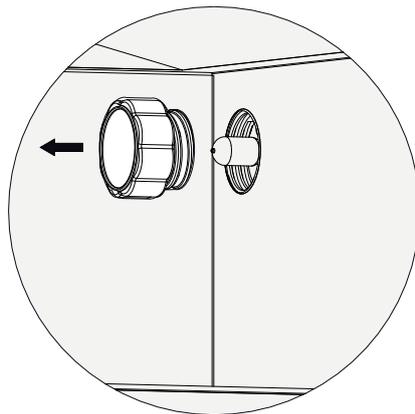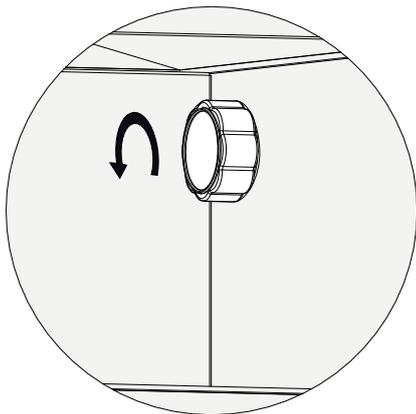

**QUESTA OPERAZIONE VA FATTA IN ASSENZA ASSOLUTA DI ALIMENTAZIONE ELETTRICA !!
THIS OPERATION MUST BE CARRIED OUT WITHOUT POWER SUPPLY !!
BEI DIESEM EINGRIFF MUSS DIE STROMVERSORGUNG VOLLSTÄNDIG UNTERBROCHEN SEIN !!
CETTE OPÉRATION DOIT ÊTRE FAITE EN L'ABSENCE TOTALE D'ALIMENTATION ÉLECTRIQUE !!
¡ESTA OPERACIÓN DEBE REALIZARSE EN AUSENCIA ABSOLUTA DE ALIMENTACIÓN ELÉCTRICA!!**

MANUFACTURER'S DECLARATION OF CONFORMITY

SUBJECT: ABSENCE OF ASBESTOS AND CADMIUM

IT IS HEREBY DECLARED THAT ALL APPLIANCES ARE ASSEMBLED USING MATERIALS THAT DO NOT CONTAIN ASBESTOS OR ASBESTOS DERIVATIVES AND THAT CADMIUM IS NOT PRESENT OR USED IN ANY FORM IN THE FILLER MATERIAL USED FOR WELDING, IN FULL COMPLIANCE WITH THE RELEVANT STANDARD.

GENERAL NOTICES

LA NORDICA S.p.A's LIABILITY IS LIMITED TO THE SUPPLY OF THE APPLIANCE.

THE INSTALLATION MUST BE CARRIED OUT IN COMPLIANCE WITH INDUSTRY BEST PRACTICES, IN ACCORDANCE WITH THE PROVISIONS SET FORTH IN THESE INSTRUCTIONS AND PROFESSIONAL STANDARDS, BY QUALIFIED PERSONNEL ACTING ON BEHALF OF COMPANIES CAPABLE OF ASSUMING FULL RESPONSIBILITY FOR THE ENTIRE SYSTEM.

LA NORDICA S.p.A. IS NOT RESPONSIBLE FOR ANY UNAUTHORISED MODIFICATIONS TO THE PRODUCT, NOR FOR THE USE OF NON-ORIGINAL SPARE PARTS.

This appliance is not suitable for use by individuals (including children) with reduced physical, sensory or mental capabilities, or those lacking experience and knowledge, unless they are supervised and instructed in the use of the appliance by a responsible person ensuring their safety. Children must be supervised to ensure they do not play with the appliance (EN 60335-2-102 / 7.12).

IT IS MANDATORY TO COMPLY WITH NATIONAL AND EUROPEAN STANDARDS, AS WELL AS LOCAL BUILDING REGULATIONS AND FIRE SAFETY REGULATIONS.



DO NOT PLACE FOOD DIRECTLY ON THE PRODUCT SURFACES OR ON THE ACCESSORIES SUPPLIED: ALWAYS PLACE SUITABLE MATERIALS FOR CONTACT WITH FOOD BETWEEN THE SURFACES AND THE FOOD.



NO MODIFICATIONS TO THE APPLIANCE ARE PERMITTED. LA NORDICA S.P.A. DISCLAIMS ALL LIABILITY FOR ANY FAILURE TO OBSERVE THESE PRECAUTIONS.

THIS INSTRUCTION MANUAL FORMS AN INTEGRAL PART OF THE PRODUCT. ENSURE THAT IT REMAINS WITH THE APPLIANCE AT ALL TIMES, EVEN IN THE EVENT OF SALE, TRANSFER TO ANOTHER OWNER OR USER, OR RELOCATION TO ANOTHER PREMISES. IF IT IS LOST OR DAMAGED, REQUEST A REPLACEMENT FROM YOUR LOCAL TECHNICAL SERVICE PROVIDER. THIS PRODUCT MUST BE USED ONLY FOR ITS EXPRESSLY INTENDED PURPOSE. THE MANUFACTURER ACCEPTS NO CONTRACTUAL OR EXTRA-CONTRACTUAL LIABILITY FOR DAMAGES TO PERSONS, ANIMALS, OR PROPERTY CAUSED BY INCORRECT INSTALLATION, IMPROPER ADJUSTMENT OR MAINTENANCE, AND MISUSE OF THE APPLIANCE.

INSTALLATION MUST BE CARRIED OUT BY QUALIFIED AND AUTHORISED PERSONNEL, WHO WILL ASSUME FULL RESPONSIBILITY FOR THE FINAL INSTALLATION AND PROPER OPERATION OF THE PRODUCT. ALL NATIONAL, REGIONAL, PROVINCIAL AND LOCAL LAWS AND REGULATIONS IN THE COUNTRY WHERE THE APPLIANCE IS INSTALLED, AS WELL AS THE INSTRUCTIONS IN THIS MANUAL, MUST BE CONSIDERED.

THE USE OF THE APPLIANCE MUST COMPLY WITH ALL LOCAL, REGIONAL, NATIONAL AND EUROPEAN REGULATIONS.

THE MANUFACTURER ACCEPTS NO LIABILITY IF THESE PRECAUTIONS ARE NOT FOLLOWED.

AFTER UNPACKING, CHECK FOR ANY DAMAGE OR MISSING PARTS. IF THE APPLIANCE DOES NOT MEET EXPECTATIONS, CONTACT THE RETAILER WHERE IT WAS PURCHASED.

ALL ELECTRICAL COMPONENTS (WHERE PRESENT) COMPRISING THE PRODUCT, AND WHICH ARE ESSENTIAL FOR ITS PROPER FUNCTIONING, MUST ONLY BE REPLACED WITH ORIGINAL SPARE PARTS BY AN AUTHORISED TECHNICAL SERVICE CENTRE.

SAFETY

- ◆ **THIS APPLIANCE MAY BE USED BY CHILDREN AGED 8 AND ABOVE, AS WELL AS INDIVIDUALS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR THOSE WITHOUT EXPERIENCE OR KNOWLEDGE, PROVIDED THEY ARE SUPERVISED OR HAVE RECEIVED INSTRUCTIONS ON THE SAFE USE OF THE APPLIANCE AND UNDERSTAND THE POTENTIAL HAZARDS. CHILDREN MUST BE SUPERVISED TO**

ENSURE THEY DO NOT PLAY WITH THE APPLIANCE. CLEANING AND MAINTENANCE INTENDED TO BE PERFORMED BY THE USER MUST NOT BE CARRIED OUT BY CHILDREN WITHOUT SUPERVISION.

- ◆ **DO NOT TOUCH THE HEATER WITH BARE FEET OR WITH WET OR DAMP BODY PARTS.**
- ◆ **MODIFICATIONS TO THE APPLIANCE ARE STRICTLY PROHIBITED.**
- ◆ **DO NOT PULL, DISCONNECT OR TWIST THE ELECTRICAL CABLES PROTRUDING FROM THE APPLIANCE (IF PRESENT), EVEN WHEN THE UNIT IS UNPLUGGED.**
- ◆ **ENSURE THAT THE POWER CORD (IF PRESENT) IS POSITIONED SO THAT IT DOES NOT COME INTO CONTACT WITH HOT PARTS OF THE APPLIANCE.**
- ◆ **THE POWER PLUG MUST REMAIN ACCESSIBLE AFTER INSTALLATION.**
- ◆ **DO NOT CLOSE OR REDUCE THE SIZE OF THE AIRING VENTS IN THE INSTALLATION SITE, AS THESE ARE ESSENTIAL FOR PROPER COMBUSTION.**
- ◆ **DO NOT LEAVE PACKAGING ITEMS WITHIN REACH OF CHILDREN OR UNASSISTED INCAPACITATED PERSONS.**
- ◆ **THE COMBUSTION CHAMBER DOOR MUST ALWAYS REMAIN CLOSED DURING OPERATION AND SHOULD ONLY BE OPENED FOR FUEL LOADING, IGNITION AND CLEANING.**
- ◆ **WHEN THE APPLIANCE IS IN OPERATION, ALL EXTERNAL SURFACES BECOME HOT, THEREFORE, EXERCISE CAUTION**
- ◆ **BEFORE RESTARTING THE APPLIANCE AFTER A LONG PERIOD OF NON-USE, CHECK FOR OBSTRUCTIONS.**
- ◆ **IN THE EVENT OF A FLUE FIRE, USE APPROPRIATE FIRE SUPPRESSION METHODS OR CALL THE FIRE BRIGADE.**
- ◆ **THIS APPLIANCE MUST NOT BE USED AS A WASTE INCINERATOR**
- ◆ **NEVER USE PETROL, KEROSENE, LIGHTER FLUID, ETHANOL OR SIMILAR LIQUIDS TO START OR RESTART THE HEATER.**
- ◆ **MAJOLICA TILES (WHERE PRESENT) ARE HIGH-QUALITY HANDCRAFTED PRODUCTS AND MAY THEREFORE EXHIBIT MINOR SPECKLING, CRAZING OR SLIGHT COLOUR IMPERFECTIONS. THESE CHARACTERISTICS ATTEST TO ITS HIGH-QUALITY NATURE. DUE TO THE DIFFERENT EXPANSION COEFFICIENTS OF ENAMEL AND MAJOLICA, MICRO-CRACKS (CRAZING) MAY APPEAR, PROVING THEIR AUTHENTICITY. TO CLEAN MAJOLICA SURFACES, USE A SOFT, DRY CLOTH. IF ANY CLEANING AGENTS OR LIQUIDS ARE USED, THEY MAY PENETRATE THE MICRO-CRACKS, MAKING THEM MORE VISIBLE.**

ELECTRICAL CONNECTION

THE PRODUCT MUST BE INSTALLED AND CONNECTED BY QUALIFIED PERSONNEL IN ACCORDANCE WITH CURRENT REGULATIONS. (SEE CHAP. SPECIAL WARNINGS). LA NORDICA S.P.A. IS NOT RESPONSIBLE FOR ANY UNAUTHORISED MODIFICATIONS TO THE PRODUCT, NOR FOR THE USE OF NON-ORIGINAL SPARE PARTS.



CAUTION: THE POWER CABLE MUST NOT BE IN CONTACT WITH HOT PARTS.
IN ANY CASE, THE POWER CABLE MUST BE REPLACED ONLY BY PERSONNEL AUTHORISED BY LANORDICA: SERVICE CENTRE AND/OR AN AUTHORISED INSTALLER.

CONNECTION: Connect the power cable to a two-pole switch with a distance between contacts of at least 3 mm (Power supply 230 V~ 50 Hz; correct system earthing connection is essential).



CAUTION: THIS OPERATION MUST BE PERFORMED WITH THE ELECTRICAL POWER SUPPLY COMPLETELY DISCONNECTED!!
WARNING: THE PRODUCT MUST BE CONNECTED TO THE MAINS WITH A RESIDUAL-CURRENT MAIN SWITCH UPSTREAM, IN ACCORDANCE WITH CURRENT REGULATIONS. IMPROPER USE RELIEVES THE MANUFACTURER OF ALL LIABILITY.

FIRE SAFETY

MINIMUM CLEARANCES

Installation next to combustible or heat-sensitive materials is permitted, **provided that suitable safety distances are maintained, as specified in the CEMI (CE Marking Information), the Declaration of Performance (DoP) and the label at the beginning of the manual (page 2).**

ALL NATIONAL, REGIONAL, PROVINCIAL AND LOCAL LAWS AND REGULATIONS IN THE COUNTRY WHERE THE APPLIANCE IS INSTALLED, AS WELL AS THE INSTRUCTIONS IN THIS MANUAL, MUST BE CONSIDERED.

DURING INSTALLATION, THE FOLLOWING SAFETY MEASURES MUST BE OBSERVED:

- To ensure adequate thermal insulation, maintain the minimum safety distance at the rear (d_r) and on both sides (d_s) from flammable or heat-sensitive materials (e.g. furniture, wooden cladding, fabrics, etc.). **THESE DISTANCES MUST NOT FALL BELOW THE SPECIFIED VALUES;**
- In front of the firebox door, within its radiation area, there must be no combustible or heat-sensitive objects or construction materials at a distance of less than d_p . This distance may be reduced to 400 mm if a rear-ventilated, heat-resistant protective screen is installed in front of the entire surface to be protected;
- IF THE PRODUCT IS INSTALLED ON A FLAMMABLE FLOOR** (such as carpet, parquet, cork, etc.), **THE FLOOR MUST BE PROTECTED WITH A NON-COMBUSTIBLE COVERING**, such as ceramic, stone, glass or steel, etc. The non-combustible protective material must: cover the area beneath the appliance and extend forward by at least the distance specified as d_f ; sideward by at least the distance specified as d_s ; and rearward by at least the distance specified as d_r . These distances ensure effective and safe protection;
- ABOVE THE PRODUCT**, within the distance specified as d_c **THERE MUST BE NO FLAMMABLE MATERIALS** (e.g. furniture, overhead cabinets);
- IF THE PRODUCT IS INSTALLED IN DIRECT CONTACT WITH A WALL MADE OF FLAMMABLE MATERIAL, THE AFFECTED SECTION OF THE WALL MUST BE PROTECTED WITH A LAYER OF NON-FLAMMABLE MATERIAL**, such as ceramic, stone, glass or steel etc. The protection must cover the back part of the product and extend to the sides by at least the distance indicated as d_s and on the top by at least the distance indicated as d_c ;
- For non-flammable materials, a minimum side and rear clearance must be maintained, as indicated by the distance marked d_{non} .

THE PRODUCT MUST OPERATE EXCLUSIVELY WITH THE ASH DRAWER INSERTED. THE SOLID COMBUSTION RESIDUE (ASHES) MUST BE COLLECTED IN AN AIRTIGHT, FIRE-RESISTANT CONTAINER. THE PRODUCT MUST NEVER BE IGNITED IN THE PRESENCE OF GASEOUS EMISSIONS OR VAPOURS (FOR EXAMPLE, LINOLEUM GLUE, PETROL, ETC.). DO NOT STORE FLAMMABLE MATERIALS NEAR THE PRODUCT.



DURING COMBUSTION, THERMAL ENERGY IS RELEASED, CAUSING SIGNIFICANT HEATING OF THE SURFACES, DOORS, HANDLES, CONTROLS, GLASS, FLUE PIPE AND POTENTIALLY THE FRONT SECTION OF THE APPLIANCE. AVOID CONTACT WITH THESE COMPONENTS WITHOUT SUITABLE PROTECTIVE CLOTHING OR ACCESSORIES (HEAT-RESISTANT GLOVES, CONTROL DEVICES).
ENSURE THAT CHILDREN ARE AWARE OF THESE DANGERS AND KEEP THEM AWAY FROM THE FIREBOX DURING ITS OPERATION.

WHEN USING INCORRECT OR OVERLY MOIST FUEL, TAR DEPOSITS (CREOSOTE) CAN FORM INSIDE THE FLUE, INCREASING THE RISK OF FIRE.

IN CASE OF FAULTS

The steps to follow to safely switch off the appliance in the event of a malfunction are:

Broken glass door	Discontinue use of the product and contact the authorised service centre
Overheating of certain parts of the appliance or the flue pipe	Immediately stop loading the firewood, do not open the door, close the air intake dampers until the fire extinguishes, contact the authorised service centre in case of repeated overheating.
Broken internal baffles	Discontinue use of the product and contact the authorised service centre
Weak and/or smothered flame	Check the seals and ensure the firewood is not too damp, contact the authorised service centre
In case of adverse weather conditions	Monitor the combustion process
Smoke escaping when the door is opened	Check the pressure difference between the rooms where the heater is installed and the outside; the value must always be ≥ -4 Pa

FIRST-AID MEASURES

IF A FIRE OCCURS IN THE CONNECTION OR FLUE :

- Close the loading door and the ash drawer.
- Close the combustion air dampers
- Extinguish the fire using carbon dioxide (CO₂ powder) extinguishers
- Immediately call the fire brigade



DO NOT EXTINGUISH FIRE WITH WATER JETS.

WHEN THE FLUE STOPS BURNING, IT MUST BE INSPECTED BY A SPECIALIST TO IDENTIFY ANY CRACKS OR LEAKAGE POINTS.

Figure 1

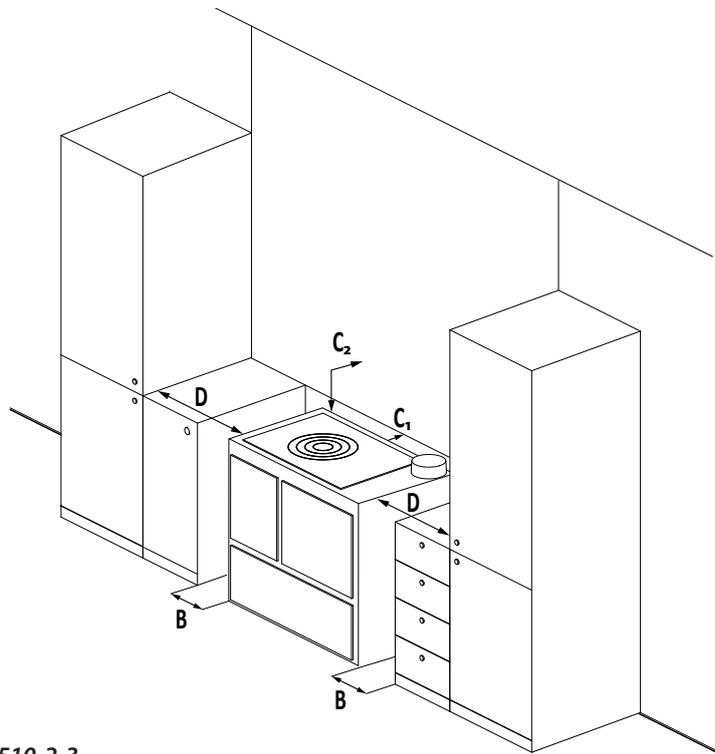


Figure A.303, EN 16510-2-3

B	Lateral safety distance (from the side wall to the combustible material)
D	Lateral safety distance (from the top of the hot plate to the combustible material)
C1	Rear safety distance (from the rear wall of the appliance to the combustible material)
C2	Rear safety distance (from the top of the hot plate to the combustible material)

Caution: If the specifications indicated above are not present, for measurements B and D refer to the value d_s and for C1 and C2 refer to the value d_r , as indicated in the Technical Data Label or in the Technical Data Sheet of the product.

INSTALLATION REGULATIONS

THE INSTALLATION OF THE PRODUCT AND ITS AUXILIARY EQUIPMENT RELATED TO THE HEATING SYSTEM, MUST COMPLY WITH ALL CURRENT STANDARDS AND REGULATIONS, AS WELL AS LEGAL REQUIREMENTS.

THE INSTALLATION, SYSTEM CONNECTIONS, COMMISSIONING AND OPERATIONAL TESTING MUST BE CARRIED OUT IN COMPLIANCE WITH BEST PRACTICES BY PROFESSIONAL, QUALIFIED PERSONNEL, ENSURING FULL ADHERENCE TO NATIONAL, REGIONAL, PROVINCIAL AND MUNICIPAL REGULATIONS IN THE COUNTRY WHERE THE APPLIANCE IS INSTALLED, AS WELL AS THESE INSTRUCTIONS.

THE INSTALLATION MUST BE CARRIED OUT BY AUTHORISED PERSONNEL, WHO MUST ISSUE THE PURCHASER WITH A DECLARATION OF CONFORMITY FOR THE SYSTEM, AND ASSUME FULL RESPONSIBILITY FOR THE FINAL INSTALLATION AND THE PROPER FUNCTIONING OF THE INSTALLED PRODUCT.

The Product is pre-assembled and ready for connection and must be connected via a duct to the pre-existing building flue. The duct should ideally be short, straight, horizontal or slightly inclined upwards. All connections must be airtight.

Before installation, perform the following checks:

- ◆ Hot air ducting (if present).
- ◆ Determine the type of ventilation (natural or forced – see chapter HOOD OR ADJACENT ROOM VENTILATION - if present)
- ◆ Check the load-bearing capacity of the structure to ensure it can support the weight of the appliance. If the load-bearing capacity is insufficient, appropriate measures must be taken. **LA NORDICA S.p.A.**'s responsibility is limited to supplying the appliance only (see technical data in the document "CE MARKING INFORMATION").
- ◆ Ensure that the floor can support the weight of the appliance; if made of flammable material, appropriate insulation must be provided.
- ◆ Check that the room where the appliance will be installed is suitably ventilated, paying attention in particular to airtight doors and windows (with sealing gaskets).
- ◆ AVOID INSTALLATION IN ROOMS WITH SHARED VENTILATION DUCTS, KITCHEN HOODS (WITH OR WITHOUT EXTRACTORS), TYPE B GAS APPLIANCES, HEAT PUMPS, OR ANY OTHER APPLIANCES WHOSE SIMULTANEOUS OPERATION COULD CREATE NEGATIVE PRESSURE IN THE ROOM (see **UNI 10683 Standard**). **Under all conditions, including the presence of extractor hoods and/or controlled forced ventilation systems, the pressure difference between the rooms where the heater is installed and the outside must always be ≥ -4 Pa (e.g. - 3 Pa is an acceptable value).**
- ◆ Check that the flue and pipes to which the appliance will be connected are suitable (see the technical data in the document "CE MARKING INFORMATION").
- ◆ The diameter of the opening for the connection to the chimney must at least correspond to the diameter of the flue pipe. The opening should be equipped with a wall connection for inserting the exhaust pipe and a rosette.
- ◆ The unused flue exhaust hole must be sealed with the appropriate cap (if present).
- ◆ The installation must allow access for cleaning and maintenance of both the product and the flue.
- ◆ Use a spirit level to ensure that the appliance is perfectly level, allowing for the proper movement of the door (if a sliding door is present). Adjust the levelling feet (if present).



LA NORDICA S.p.A. DISCLAIMS ALL LIABILITY FOR DAMAGE TO PROPERTY AND/OR PERSONS CAUSED BY THE INSTALLATION. FURTHERMORE, THE COMPANY IS NOT RESPONSIBLE FOR ANY UNAUTHORISED MODIFICATIONS TO THE PRODUCT, NOR FOR THE USE OF NON-ORIGINAL SPARE PARTS.

MAINTENANCE PROVISIONS

For non-routine maintenance of the product, it may be necessary to move it away from the adjacent walls. This operation must be carried out by a qualified technician, authorised to disconnect and subsequently reconnect the exhaust ducts for combustion products. For heaters connected to a water system, the connection between the system and the product must be such as to allow a qualified technician to move the heater at least 1 metre away from adjacent walls during non-routine maintenance

VENTILATION AND AERATION OF THE INSTALLATION AREA

AS THESE PRODUCTS DRAW COMBUSTION AIR FROM THE INSTALLATION ROOM, IT IS **MANDATORY** TO ENSURE A SUFFICIENT SUPPLY OF FRESH AIR WITHIN THE ROOM ITSELF. IN THE CASE OF AIRTIGHT WINDOWS AND DOORS (E.G. ENERGY-EFFICIENT HOMES), THE SUPPLY OF FRESH AIR MAY NO LONGER BE GUARANTEED, WHICH CAN COMPROMISE THE APPLIANCE'S DRAUGHT, USER COMFORT AND SAFETY.

IMPORTANT: For improved air quality and proper oxygenation of the environment, combustion air can be drawn directly from the outside via a connection to a flexible hose. The connecting hose (NOT supplied) must be smooth and fire-resistant and have a minimum diameter as specified in **Figure 2**. Its maximum length must not exceed 3 m for STOVES and COOKERS and 4 m for FIREPLACES, with no more than three bends. If this hose is connected directly to the outside, it must be equipped with a windbreak.

FOR PROPER OPERATION OF THE APPLIANCE, IT IS MANDATORY TO ENSURE AN ADEQUATE SUPPLY OF AIR IN THE INSTALLATION AREA, BOTH FOR COMBUSTION AND FOR RE-OXYGENATION OF THE ROOM.

This means that, through dedicated openings communicating with the outside, combustion air must be able to circulate even when doors and windows are closed.

The air intakes must meet the following requirements:

- ◆ BE PROTECTED USING GRATES, WIRE MESH, ETC., WITHOUT REDUCING THE NET FREE SECTION;
- ◆ BE DESIGNED TO ALLOW FOR MAINTENANCE OPERATIONS;
- ◆ BE POSITIONED IN A WAY THAT PREVENTS OBSTRUCTION;
- ◆ IF EXTRACTOR HOODS ARE PRESENT IN THE INSTALLATION ROOM, THEY MUST NOT BE USED SIMULTANEOUSLY WITH THE APPLIANCE. These may cause smoke to escape into the room, even when the firebox door is closed.

Fresh, uncontaminated air intake can also be provided from an adjacent room (indirect ventilation and airing), provided the airflow is unobstructed through permanent openings connected to the outside.

THE ADJACENT ROOM MUST NOT BE USED AS A GARAGE, STORAGE AREA FOR COMBUSTIBLE MATERIALS, HIGH FIRE-RISK AREA, BATHROOM, BEDROOM OR SHARED/Common AREA OF THE BUILDING.

Ventilation is considered sufficient when the room is equipped with air intakes according to the table:

Appliance categories	Reference standard	Percentage of the net opening section with respect to the flue gas section in the appliance	Minimum net opening size of the ventilation duct
Fireplaces	EN 16510-2-2	50 %	200 cm ²
Stoves	EN 16510-2-1	50 %	100 cm ²
Cookers	EN 16510-2-3	50 %	100 cm ²




INSTALLATION IS PROHIBITED IN ROOMS WITH A FIRE HAZARD. INSTALLATION IS ALSO PROHIBITED IN RESIDENTIAL ROOMS WHERE THE MEASURED PRESSURE DIFFERENCE BETWEEN THE INDOOR AND OUTDOOR ENVIRONMENT EXCEEDS 4 Pa – REFERENCE FOR ITALY ACCORDING TO UNI10683 REGULATIONS. UNDER ALL CONDITIONS, INCLUDING THE PRESENCE OF EXTRACTOR HOODS AND/OR CONTROLLED FORCED VENTILATION SYSTEMS, THE PRESSURE DIFFERENCE BETWEEN THE ROOMS WHERE THE HEATER IS INSTALLED AND THE OUTSIDE MUST ALWAYS BE ≥ -4 Pa (E.G. -3 Pa IS AN ACCEPTABLE VALUE).


IT IS MANDATORY TO COMPLY WITH ALL NATIONAL, REGIONAL, PROVINCIAL AND LOCAL LAWS AND REGULATIONS IN THE COUNTRY WHERE THE APPLIANCE IS INSTALLED.

Figure 2


FRESH AIR INTAKE

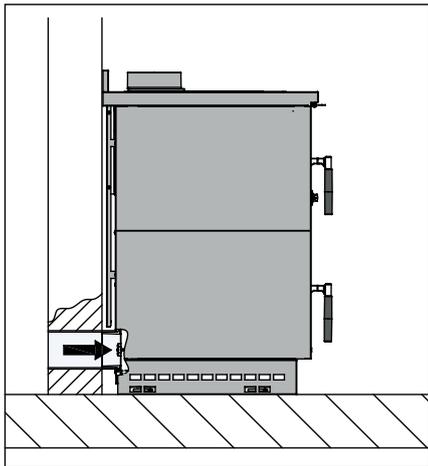

Air supply from the rear
Max. pipe length 3 m


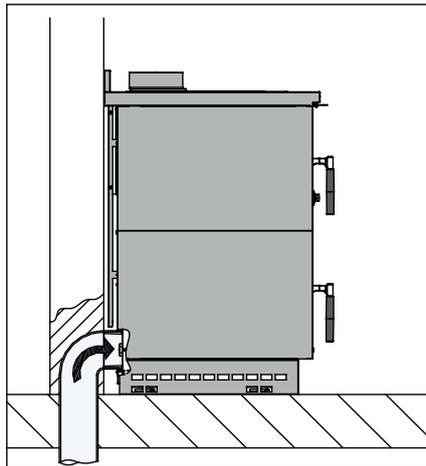


Air supply from below
Max. pipe length 3 m

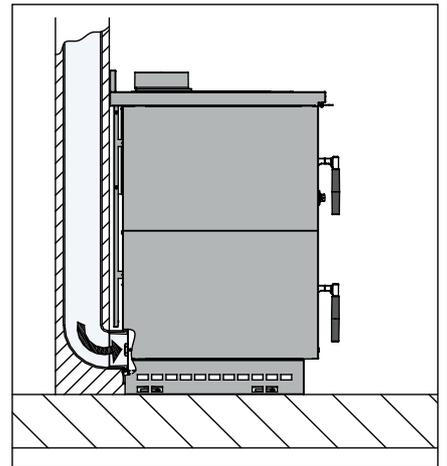

Air supply from above
ONLY with Certified System

FIREPROOF flexible hose not supplied!

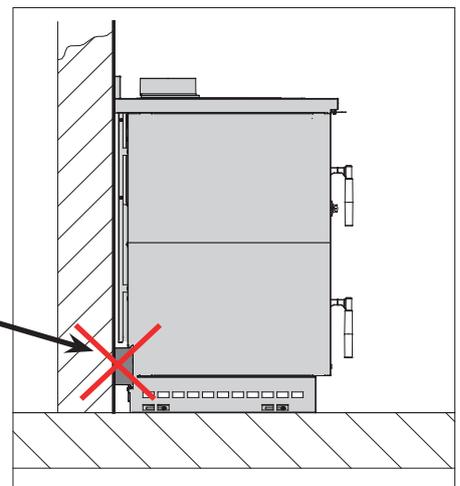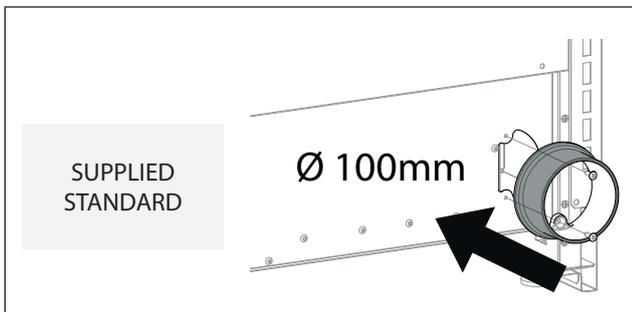

CAUTION - IMPORTANT: DO NOT PLACE THE COOKER AGAINST THE WALL WITH THE RING INSTALLED, OTHERWISE THE PRODUCT WILL NOT WORK.

PERMITTED/NOT PERMITTED FUELS

Only logs may be used as fuel. Only dry logs (max. moisture content 20%) should be used. A maximum of 2 or 3 logs should be loaded at a time. Logs should be approximately 20–30 cm in length and have a maximum circumference of 30–35 cm.

DO NOT EXCEED THE MAXIMUM FIREWOOD LOAD - SEE TECHNICAL DATA AND HOURLY CONSUMPTION IN THE DOCUMENT "CE MARKING INFORMATION".

NON-RESINOUS PRESSED WOOD LOGS MUST BE USED WITH CAUTION TO AVOID OVERHEATING THAT COULD DAMAGE THE APPLIANCE, AS THEY HAVE A HIGH HEATING VALUE.

The firewood must have a moisture content of less than 20% and be stored in a dry location. Damp wood makes ignition more difficult, as more energy is required to evaporate the moisture present. The moisture content also creates the disadvantage that, as the temperature drops, the water condenses first in the firebox and then in the chimney, causing a considerable deposit of soot with the subsequent possible risk of fire.

Freshly cut wood contains about 60% H₂O, making it unsuitable for burning. It must be stored in a dry, ventilated area (e.g. under a shelter) for at least two years before use.

THE FOLLOWING MATERIALS MUST NOT BE BURNED: COAL, WOOD SCRAPS, BARK RESIDUE, WOOD PANELS, DAMP OR PAINTED WOOD, PLASTICS. USING THESE MATERIALS WILL VOID THE PRODUCT WARRANTY.

PAPER AND CARDBOARD SHOULD ONLY BE USED FOR IGNITION.

BURNING WASTE IS STRICTLY PROHIBITED AS IT MAY DAMAGE THE APPLIANCE AND THE FLUE, CAUSE HEALTH RISKS AND LEAD TO COMPLAINTS FROM NEIGHBOURS DUE TO UNPLEASANT ODOURS.

Wood is not a long-burning fuel, meaning continuous heating throughout the night is not possible.

Species	kg/m ³	kWh/kg 20% Moisture
Beech	750	4.0
Turkey oak	900	4.2
Elm	640	4.1
Poplar	470	4.1
Larch*	660	4.4
Spruce*	450	4.5
Scots pine *	550	4.4

* UNSUITABLE RESINOUS WOODS



THE CONTINUOUS AND PROLONGED USE OF FIREWOOD THAT IS PARTICULARLY RICH IN AROMATIC OILS (E.G., EUCALYPTUS, MYRTLE, ETC.) CAUSES THE RAPID DETERIORATION (FLAKING) OF THE CAST-IRON COMPONENTS IN THE PRODUCT.

The declared technical data were obtained using class "A1" beech wood in accordance with UNI EN ISO 17225-5, with a moisture content of less than 20%. The use of other wood types may require specific adjustments and could result in different product performance.

CALCULATION OF THE HEAT OUTPUT

There is no absolute rule for calculating the correct power required. This power depends on the space to be heated, but is also largely influenced by the level of insulation.

On average, the heat output required for a properly insulated room will be 30 kcal/h per m³ (for an outside temperature of 0°C). Since 1 kW corresponds to 860 kcal/h, we can assume a value of 35 W/m³.

Assuming you wish to heat a 150 m³ (10 x 6 x 2.5 m) room in an insulated house, you will need 150 m³ x 35 W/m³ = 5250 W or 5.25 kW. As a primary heating source, an 8 kW appliance should be sufficient.

Fuel	Unit	Indicative combustion value		Required quantity in relation to 1 kg of dry wood
		kcal/h	kW	
Dry wood (15% moisture)	kg	3600	4.2	1.00
Wet wood (50% moisture)	kg	1850	2.2	1.95
Wood briquettes	kg	4000	5.0	0.84
Brown coal briquettes	kg	4800	5.6	0.75
Normal anthracite	kg	7700	8.9	0.47
Coke	kg	6780	7.9	0.53
Natural gas	m ³	7800	9.1	0.46
Naphtha	L	8500	9.9	0.42
Electricity	kWh	860	1.0	4.19

FLUE EXHAUST

FLUE PIPE

THE COMPONENTS OF THE COMBUSTION GAS EVACUATION SYSTEM MUST BE SELECTED AND RATED IN ACCORDANCE WITH CURRENT REGULATIONS, CONSIDERING THE SPECIFIC INSTALLATION CONDITIONS.

The following checks are recommended:

- ♦ The chimney system must be assessed in accordance with the following technical standards (where applicable): EN 15287-1, EN 15287-2, EN 13063-1, EN 13063-2, EN 1457, EN 1806, EN 1856-1, EN 1856-2, and EN 13384-1;
- ♦ The proper operation of the chimney system must be verified in accordance with EN 13384-2, based on the specific installation conditions;
- ♦ The number of directional changes, including those caused by the use of T-joints, must not exceed four;
- ♦ A T-joint with a condensate collection cap must be installed at the base of the vertical section;
- ♦ The vertical duct may be located either inside or outside the building. If the flue pipe is connected to an existing flue, it must be certified for solid fuels;
- ♦ The flue pipe must include at least one airtight port for potential flue gas sampling;
- ♦ All sections of the flue pipe must be accessible for inspection;
- ♦ Inspection openings must be provided for cleaning;

When using metal pipes, the following requirements (EN 1856-1 and EN 1856-2) must be met:

FLUE - Temperature class, at least T 600 G (as stated in the technical data sheet), soot-fire resistant.

FLUE PIPE - Temperature class, at least T 600 G (as stated in the technical data sheet), soot-fire resistant.

The flue pipe is the section of piping that connects the appliance to the flue. When connecting it, the following simple but crucial principles must be observed:

- ♦ Under no circumstances should the flue pipe have a diameter smaller than that of the appliance's outlet collar. The internal diameter of the connecting pipe must match the external diameter of the appliance's flue exhaust stub (DIN 1298);
- ♦ Each metre of horizontal flue pipe travelled causes a significant pressure loss, which must be compensated for by increasing the flue pipe height if necessary;
- ♦ Each bend in the flue pipe significantly reduces the flue draught, which must be offset by an adequate increase in height;
- ♦ A maximum of three direction changes of no more than 90° each is allowed, including the connection from the appliance to the chimney (UNI 10683). These must be easily inspectable;
- ♦ The horizontal length of the flue pipe must be kept to a minimum, and its total horizontal projection must not exceed 4 metres (UNI 10683);
- ♦ Horizontal sections must have a minimum upward slope of 3%;
- ♦ The use of flexible metal pipes, fibre cement pipes or aluminium pipes is strictly prohibited.
- ♦ The connection must be made with stable and robust pipes that comply with all current standards, regulations and legal requirements. The connection to the flue must also be airtight.



CAUTION: WHEN MAKING THE FLUE CONNECTION AND WORKING NEAR FLAMMABLE MATERIALS, FOLLOW THE REQUIREMENTS OF UNI10683. THE FLUE MUST BE PROPERLY DISTANCED FROM FLAMMABLE OR COMBUSTIBLE MATERIALS USING SUITABLE INSULATION OR AN AIR GAP. MINIMUM CLEARANCE: 25 CM.



IMPORTANT: THE UNUSED FLUE EXHAUST HOLE MUST BE SEALED WITH THE RELATIVE CAP (SEE DETAILS CHAPTER).





FLUE

ESSENTIAL REQUIREMENTS FOR PROPER OPERATION OF APPLIANCE:

- ♦ The internal cross-section should preferably be circular;
- ♦ **It must be thermally insulated, waterproof and made of materials resistant to heat, combustion by-products and potential condensates;**
- ♦ It must be free of constrictions and have a predominantly vertical layout, with deviations not exceeding 45°;
- ♦ If previously used, it must be cleaned;
- ♦ All sections of the flue pipe must be accessible for inspection;
- ♦ Inspection openings must be provided for cleaning;
- ♦ Comply with the technical specifications outlined in the instruction manual;


IF THE FLUE HAS A SQUARE OR RECTANGULAR CROSS-SECTION, THE INTERNAL CORNERS MUST BE ROUNDED WITH A RADIUS OF NO LESS THAN 20 MM. FOR RECTANGULAR CROSS-SECTIONS, THE MAXIMUM SIDE RATIO MUST BE ≤ 1.5 .

A cross-section that is too small will reduce the draught. A minimum height of 4 metres is recommended. The following materials are **PROHIBITED**, as they compromise the proper functioning of the appliance: fibre cement, galvanised steel, rough or porous internal surfaces. **Figure 3** illustrates several possible solutions.

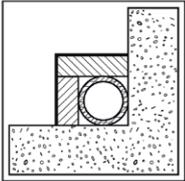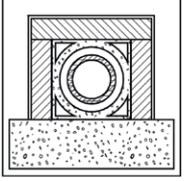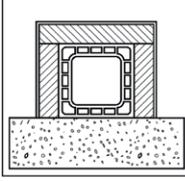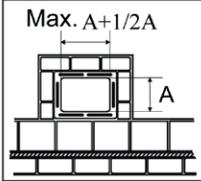Figure 3	 <p style="text-align: center;">1</p>	 <p style="text-align: center;">2</p>	 <p style="text-align: center;">3</p>	 <p style="text-align: center;">4</p>
1*	Steel flue with insulated double chamber using material resistant to 400°C. Efficiency 100% excellent.			
2*	Refractory flue with insulated double chamber and external cladding in lightweight concrete. Efficiency 100% excellent.			
3*	Traditional clay flue with square cross-section and air gaps. Efficiency 80% good.			
4	Avoid flues with rectangular internal cross-section whose ratio differs from the design. Efficiency 40% poor.			
* - Material compliant with current Standards and Regulations, as well as legal requirements.				



CAUTION: WHEN MAKING THE FLUE CONNECTION AND WORKING NEAR FLAMMABLE MATERIALS, FOLLOW THE REQUIREMENTS OF UNI10683. THE FLUE MUST BE PROPERLY DISTANCED FROM FLAMMABLE OR COMBUSTIBLE MATERIALS USING SUITABLE INSULATION OR AN AIR GAP. MINIMUM CLEARANCE: 25 CM.

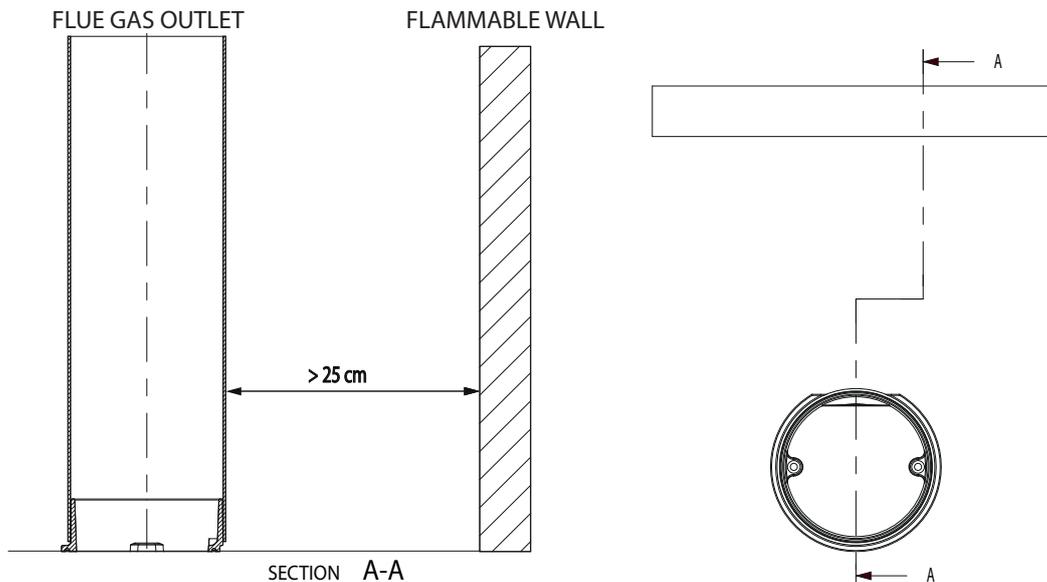

IMPORTANT: THE UNUSED FLUE EXHAUST HOLE MUST BE SEALED WITH THE RELATIVE CAP (SEE "DETAILS" CHAPTER).



FOR CORRECT INSTALLATION, THE FLUE DIMENSIONS MUST COMPLY WITH THE CE MARKING INFORMATION. FOR INSTALLATIONS WITH DIFFERENT DIMENSIONS, THE FLUE MUST BE SIZED IN ACCORDANCE WITH STANDARD EN13384-1.

A flue with an excessively large cross-section may generate a volume too large to be heated, thus causing operational difficulties for the appliance. To prevent this, it should be lined along its entire height. A cross-section that is too small will reduce the draught.



IT IS STRICTLY PROHIBITED TO ROUTE ANY OTHER SYSTEM PIPES OR AIR SUPPLY DUCTS INSIDE THE FLUE. ADDITIONALLY, IT IS PROHIBITED TO CREATE FIXED OR MOVABLE OPENINGS IN THE FLUE FOR THE CONNECTION OF ADDITIONAL UNRELATED APPLIANCES (SEE THE CHAPTER ON CONNECTING AN OPEN FIREPLACE OR FIREBOX TO THE FLUE).

THE DRAUGHT GENERATED BY YOUR FLUE MUST BE SUFFICIENT BUT NOT EXCESSIVE.
 The measurement must always be taken when the appliance is hot (nominal heat output).
 If the negative pressure exceeds 17 Pa (= 1.7 mm water column), it must be reduced by installing an additional draught regulator on the exhaust pipe or inside the chimney, in accordance with current regulations.



FOR BEST PERFORMANCE OF THE APPLIANCE, THERE MUST BE A SUFFICIENT SUPPLY OF COMBUSTION AIR TO THE INSTALLATION AREA (see the chapter on VENTILATION AND AIRING OF INSTALLATION ROOMS).

SHARED CHIMNEY FLUE

Check on the CE Technical Data Sheet whether the product is suitable for installation in a shared chimney flue (i.e. with multiple connection).

Suitable devices can be installed in shared flue systems provided that:

- ♦ installation in a shared chimney flue (i.e. with multiple connection) is allowed in the place of installation;
- ♦ the requirements of national and regional Standards are strictly complied with [for GERMANY, for example, DIN EN 13384-2, DIN V 18160-1, DIN 18896 and MFeuV-2007 (Muster-Feuerungsverordnung)];
- ♦ the installer or district chimney sweep has inspected and approved the installation conditions.

Please also remember the following indications, which the end user must comply with:

- ♦ The device can be operated only with the doors closed.
- ♦ The doors and all setting devices must remain closed when the device is not on (except for cleaning and maintenance operations).

FLUE FOR AN OPEN FIREPLACE OR FIREBOX

When using the flue of an open fireplace or firebox, the hood must be airtight below the connection point of the flue pipe (Pos. **A** **Figure 4**).

If the flue is too large (e.g. 30x40 cm or 40x50 cm), it must be lined with a stainless steel pipe with a minimum diameter of 200 mm (Pos. **B**), ensuring that the remaining space between the pipe and the flue is completely sealed immediately below the chimney pot (Pos. **C**).

Figure 4	Images are for illustrative purposes	
A	Airtight closure	
B	Stainless steel	
C	Sealing	
D	Inspection hatch	

CHIMNEY POT





THE FLUE DRAUGHT ALSO DEPENDS ON THE SUITABILITY OF THE CHIMNEY POT.


IT IS THEREFORE ESSENTIAL THAT, IF THE POT IS CUSTOM-BUILT, THE OUTLET CROSS-SECTION BE AT LEAST TWICE THE INTERNAL CROSS-SECTION OF THE FLUE (**Figure 5**).

Since the chimney pot must always extend beyond the roof ridge, it must also ensure proper exhaust even in windy conditions (**Figure 6**).


The chimney pot must meet the following requirements:

- ♦ Have an internal cross-section equivalent to that of the chimney.
- ♦ Have an effective outlet cross-section twice the internal cross-section of the flue.
- ♦ Be designed to prevent the infiltration of rain, snow or any foreign objects into the flue.
- ♦ Be easy to inspect, allowing for maintenance and cleaning operations.

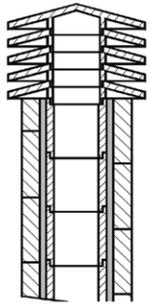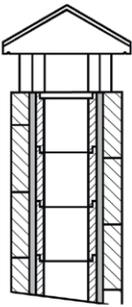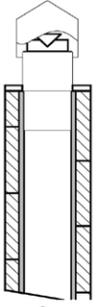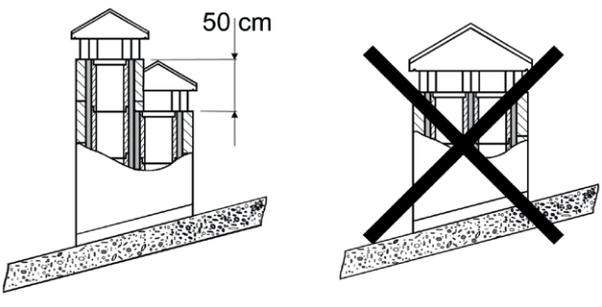
<p>Figure 5</p>	 <p style="text-align: center;">1</p>	 <p style="text-align: center;">2</p>	 <p style="text-align: center;">3</p>	 <p style="text-align: center;">4</p>
<p>1</p>	<p>Prefabricated industrial chimney pot, ensuring excellent smoke dispersion.</p>			
<p>2</p>	<p>Custom-built chimney pot. The minimum outlet cross-section must be at least twice, and ideally 2.5 times the internal cross-section of the flue.</p>			
<p>3</p>	<p>Chimney pot for steel flue, featuring an internal smoke baffle cone.</p>			
<p>4</p>	<p>For adjacent flues, one chimney pot must be positioned at least 50 cm higher than the other to prevent pressure transfer between the flues.</p>			
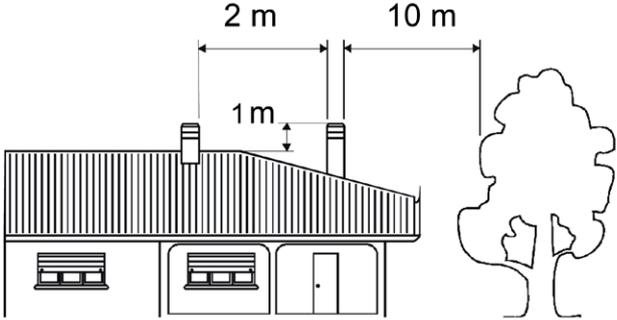
<p>Figure 6</p>		<p>The pictures are only for illustrative purposes</p>
	<p>The chimney pot must not have any obstructions within 10 m, such as walls, roof slopes or trees. Otherwise, it must be raised by at least 1 m above the highest obstacle. The chimney pot must extend at least 1 m above the roof ridge.</p>	

CHIMNEY POT DISTANCES AND POSITIONING (UNI 10683)

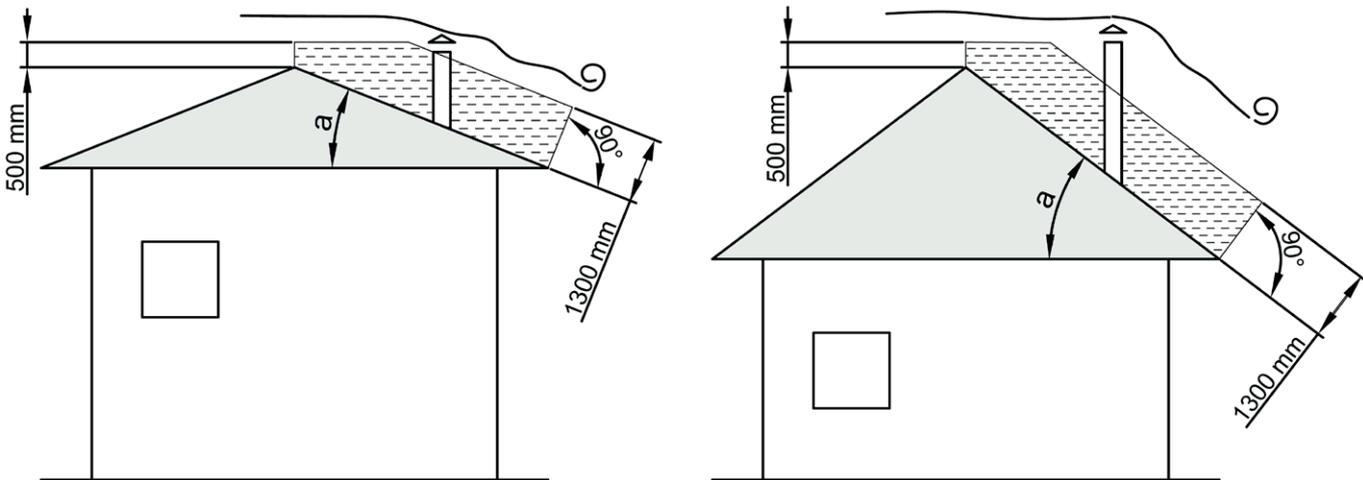
<p>Roof inclination</p>	<p>>10°</p>
 <p>The pictures are only for illustrative purposes</p>	

DETAILS VERONA XXL.16 MAIOLICA

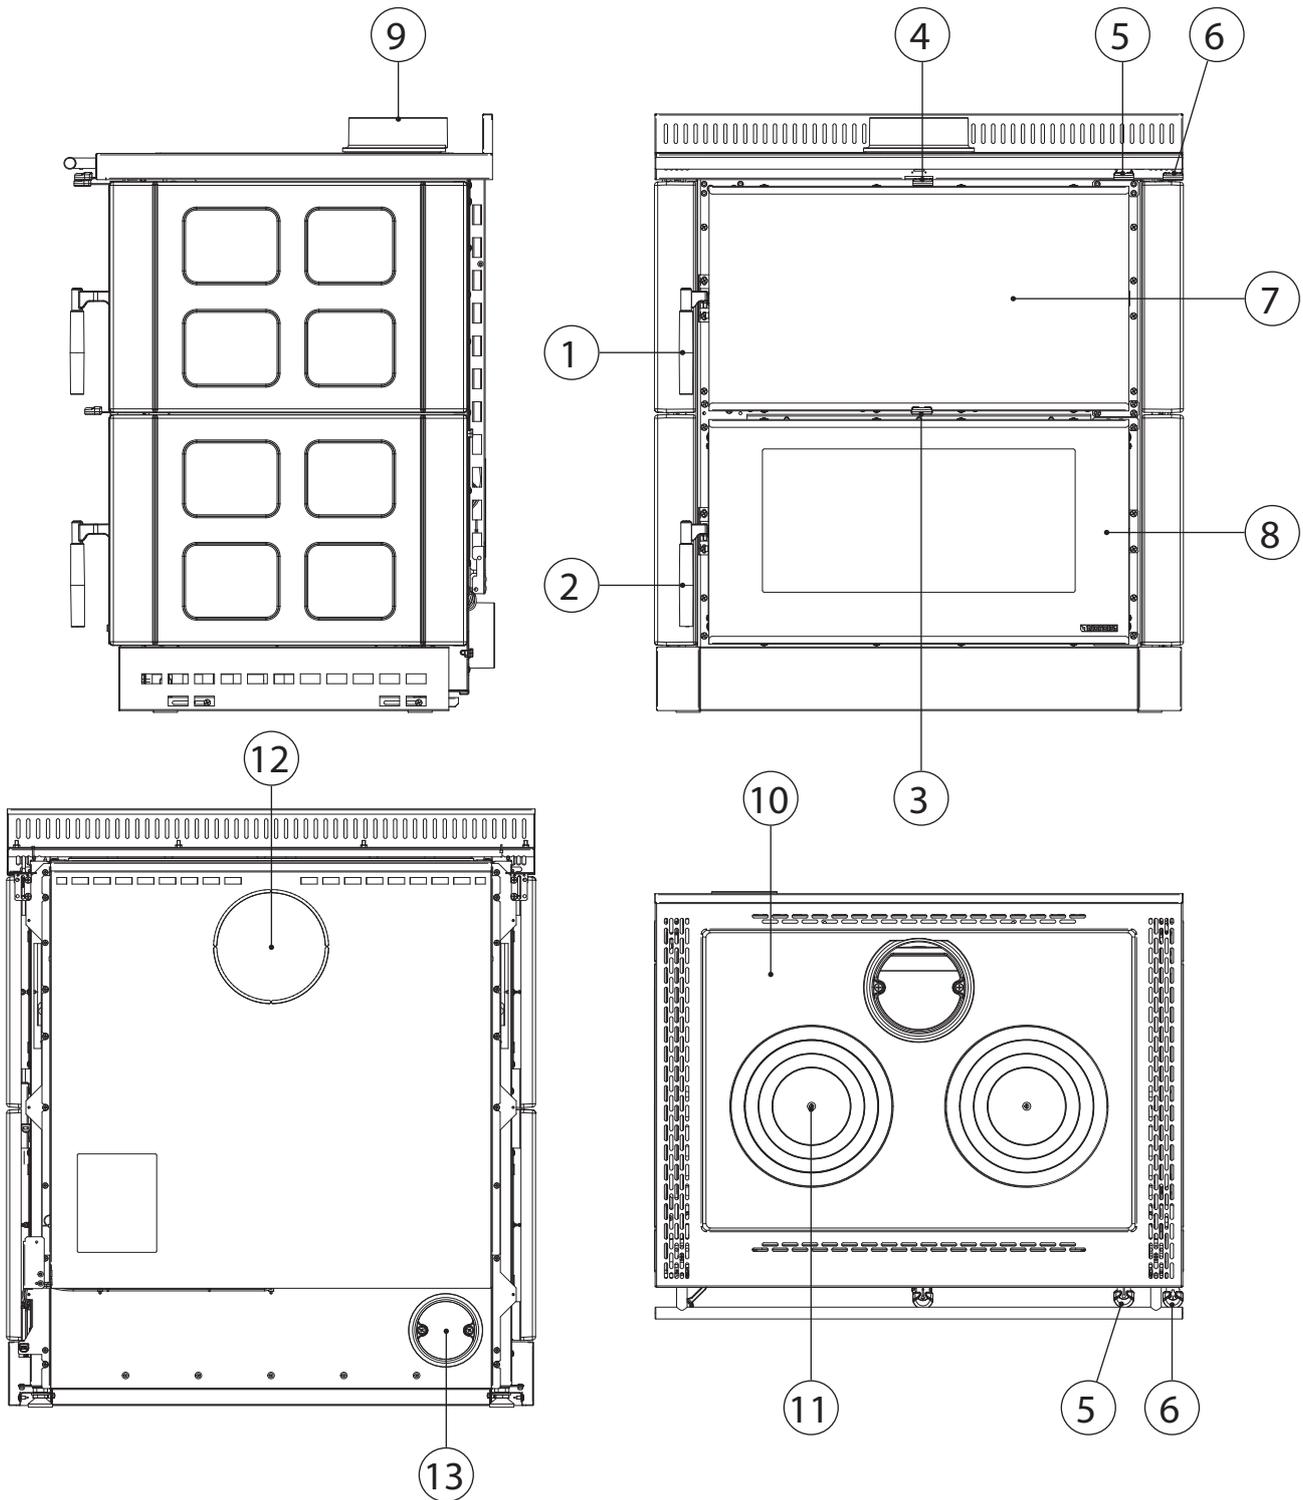

1	Firebox door handle	6	Oven light switch	11	Cast iron rings
2	Oven door handle	7	Firebox door	12	Rear flue gas outlet
3	Primary air damper	8	Oven door	13	Fresh air intake
4	Secondary air damper	9	Upper flue gas outlet	-	-
5	Ignition damper	10	Cast iron centre plate	-	-

DETAILS VERONA XXL.16 STONE

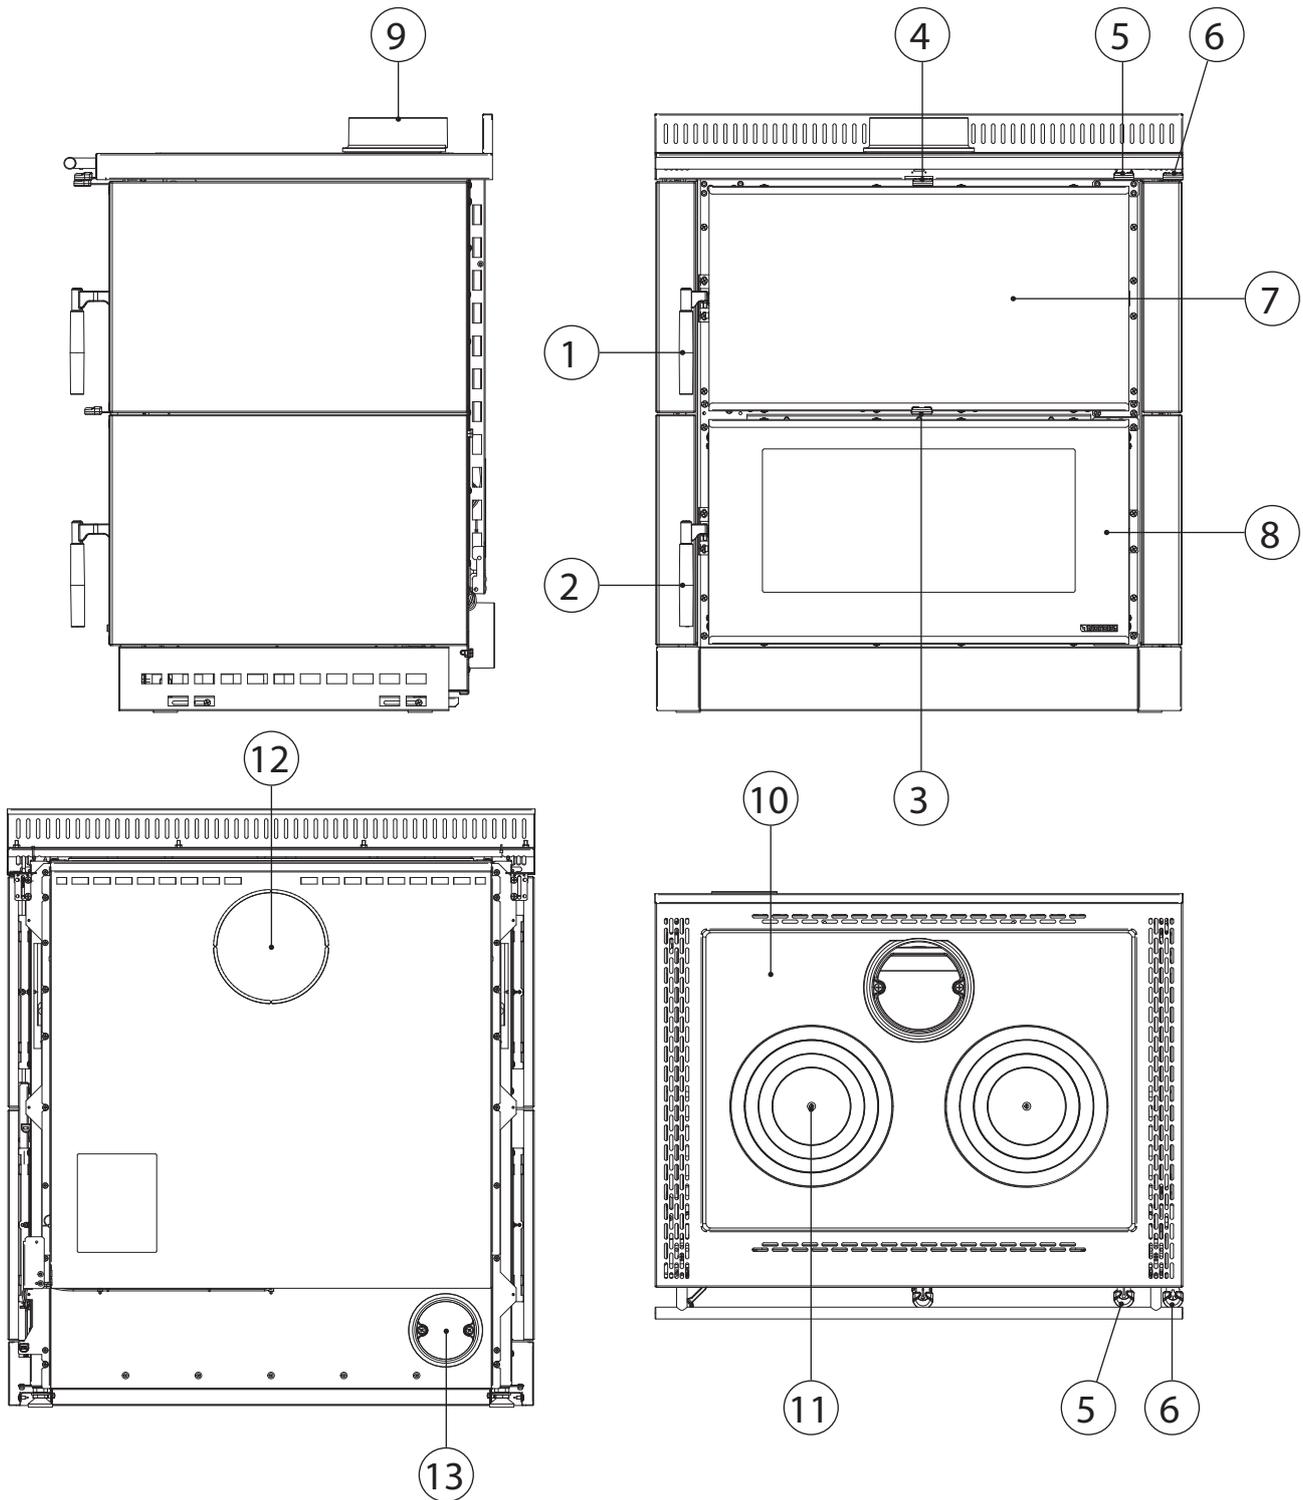

1	Firebox door handle	6	Oven light switch	11	Cast iron rings
2	Oven door handle	7	Firebox door	12	Rear flue gas outlet
3	Primary air damper	8	Oven door	13	Fresh air intake
4	Secondary air damper	9	Upper flue gas outlet	-	-
5	Ignition damper	10	Cast iron centre plate	-	-

TECHNICAL DESCRIPTION

Wood-burning stove with external side cladding equipped with a system that allows for heat to be accumulated and then gradually released into the room where it is installed.

The cooker frame is made of stainless steel. The ventilation openings on the sides and back must always be kept clear to ensure natural air circulation within the product.

CAUTION - fire hazard: do not obstruct the openings for natural air circulation, as this is necessary to prevent the product from overheating; the same goes for the openings in the plinth.

La NORDICA wood-burning stoves can be used to cook on the hotplate and in the oven, as well as to heat living spaces for limited periods or to support an insufficient central heating system. They are ideal for holiday apartments, homes used at the weekend, or for use as auxiliary heating throughout the year.


Logs are used as fuel. This is an intermittent combustion appliance.

The firebox is internally lined with single cast iron and NORDIKER panels and is equipped with tertiary air inlets for improved combustion. Inside it there is a thick flat grate (**Figure 7**).

The firebox features a panoramic door made of ceramic glass (resistant up to 750°C). This allows for a captivating view of the burning flames. It also prevents the possible escape of sparks and smoke.

The oven is equipped with sliding guides to support the chrome-plated steel grate. In this way, it is possible to pull the grate out of the oven completely, without having to hold it, making it easier to use (MAXIMUM LOAD 10 kg).

The position of the sliding guides inside the oven can be changed from the lowest position (factory setting) to the intermediate position, as described in the chapter (INSTALLATION) SLIDING GUIDES FOR OVEN GRATE-POSITIONING.

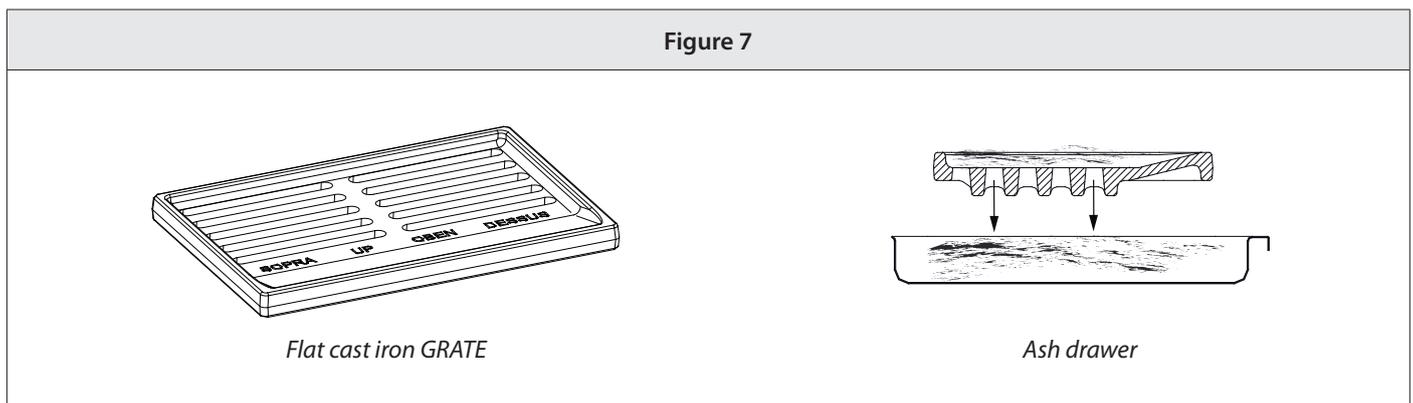

THE ROOM IS HEATED BY IRRADIATION: heat is emitted into the room through the panoramic glass (if present) and the hot external surfaces of the product.

THE APPLIANCE IS EQUIPPED WITH A MANUAL SYSTEM TO ADJUST THE COMBUSTION AIR.

1A - PRIMARY AIR DAMPER (**Figure 8**).

The primary air damper can be found in the lower part of the firebox door. This damper adjusts the flow of primary air through the ash drawer and the grate towards the fuel. Primary air is essential for the combustion process.

The ash drawer must be emptied on a regular basis so that the ash does not obstruct the flow of primary air for combustion. The primary air also keeps the fire burning.

During wood combustion, the primary air damper must be opened only slightly; otherwise, the wood will burn too quickly and the appliance might overheat.

2A - SECONDARY AIR DAMPER (**Figure 8**).

The secondary air damper can be found in the top part of the firebox door. This damper must be opened (i.e. moved to the right) particularly for wood combustion.

Using this damper, it is possible to regulate the stove's heating power. Keeping it slightly open, depending on the chimney draught, keeps the glass clean.

B - IGNITION DAMPER (**Figure 8**)

Conversion from cooker mode (**HOT PLATE USE-IGNITION USE**) to cooker mode (**OVEN USE-HEATING USE**).

On the right-hand side of the front panel of the cooker is the ignition damper control lever.

When the lever is pulled towards the user, the combustion gases pass beneath the cast iron centre plate and rings, heating them, and then flow towards the flue outlet in cooking mode (**HOT PLATE USE-IGNITION**); when, on the other hand, the lever is pushed towards the back of the cooker, the gases flow around the oven, evenly increasing the temperature inside it in cooking mode (**OVEN USE-HEATING**).

C - OVEN LIGHT (Figure 8)

The oven is equipped with a light, which turns on by slightly pulling out lever C, which activates the corresponding switch.


D - STEAM RELIEF VALVE (Figure 8)

The oven is equipped with an internal valve that releases excess steam, which may build up when cooking very moist foods or during extended cooking times.



ACT ON THE STEAM RELIEF VALVE BEFORE TURNING ON THE PRODUCT TO AVOID POSSIBLE BURNS.

Figure 8

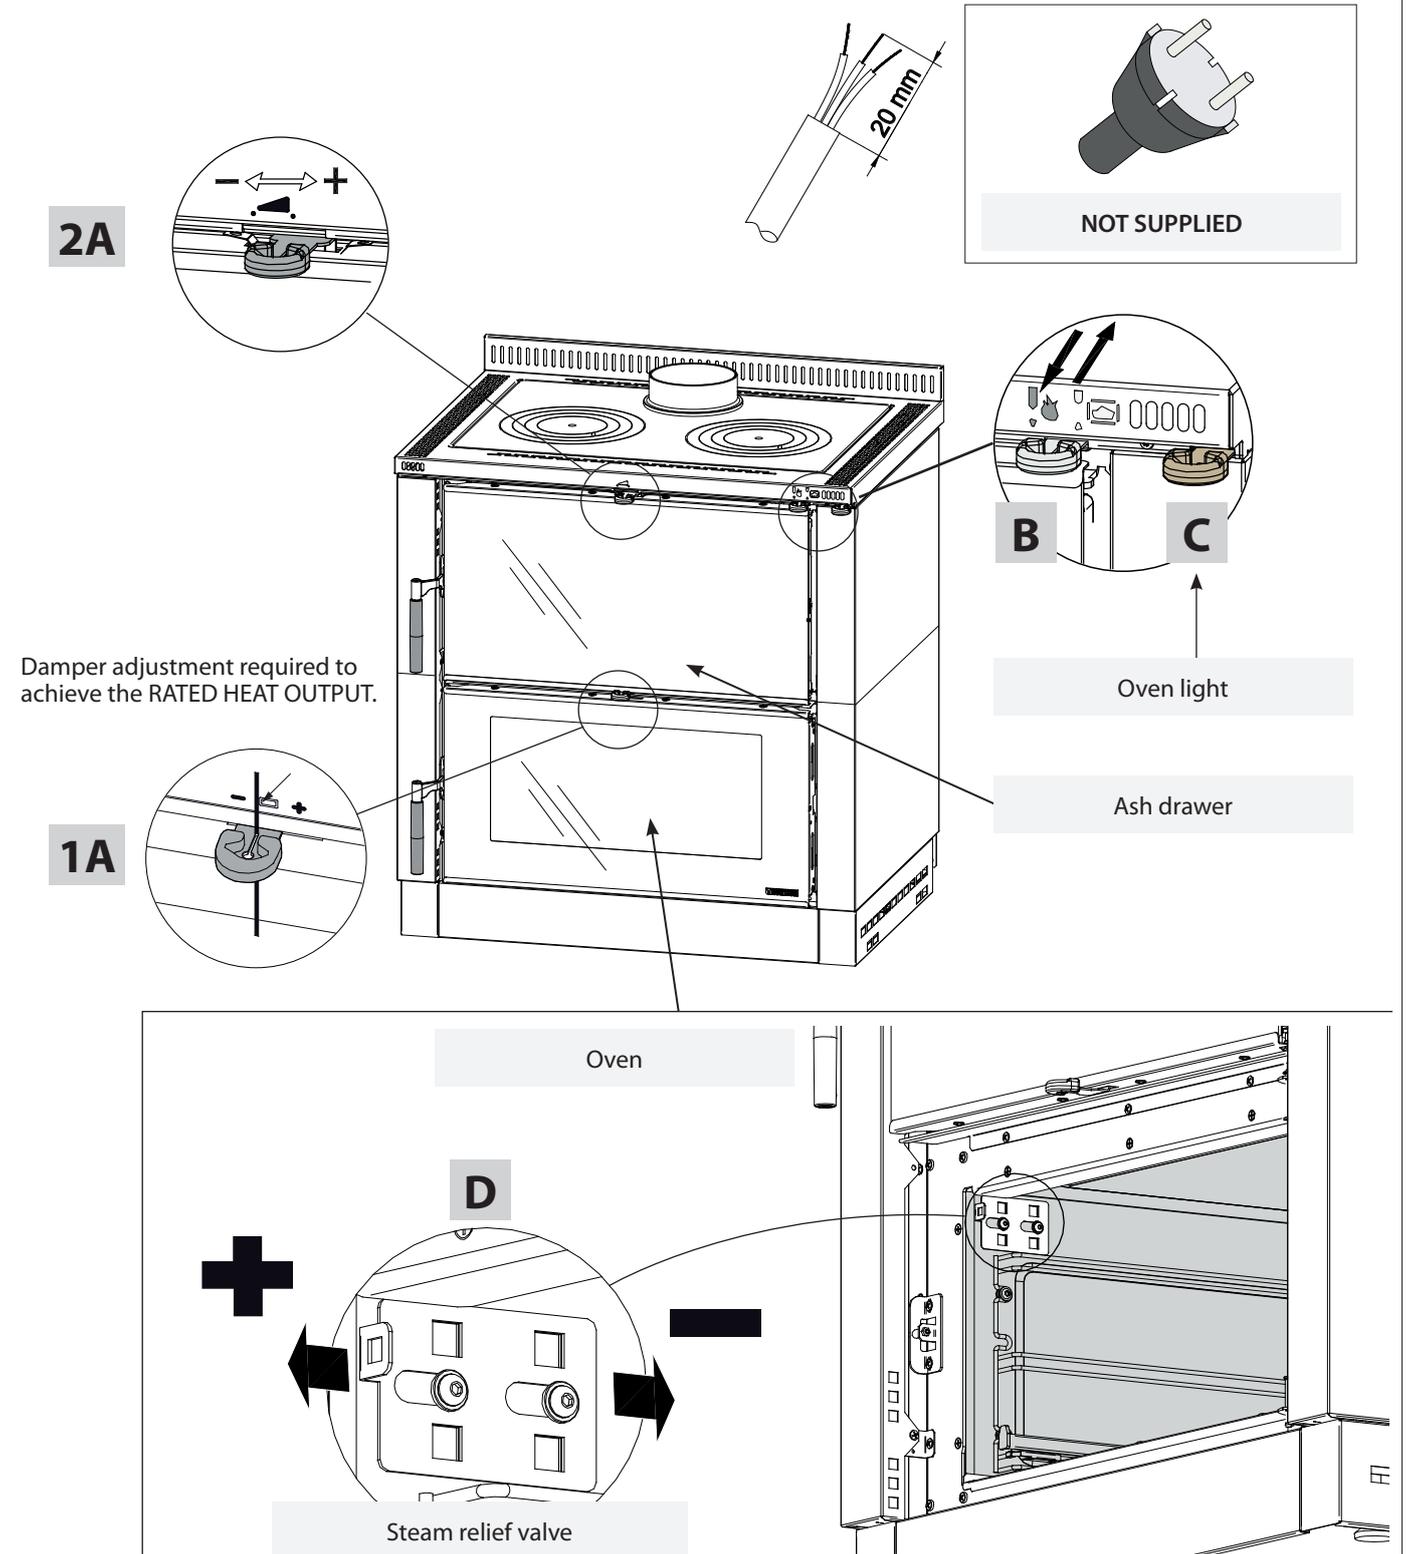

IGNITION



AT THE FIRST IGNITION, AN UNPLEASANT ODOUR WILL INEVITABLY BE PRODUCED (DUE TO THE DRYING OF THE ADHESIVES IN THE SEALING GASKET OR THE PROTECTIVE VARNISH), WHICH DISAPPEARS AFTER A SHORT PERIOD OF USE.

HOWEVER, GOOD VENTILATION OF THE ROOM MUST BE ENSURED. FOR THE FIRST IGNITION, IT IS ADVISABLE TO LOAD A SMALL AMOUNT OF FUEL AND GRADUALLY INCREASE THE HEAT OUTPUT OF THE APPLIANCE.

IT IS PROHIBITED TO USE LIQUIDS SUCH AS ALCOHOL, PETROL, PETROLEUM AND THE LIKE. NEVER SWITCH ON THE APPLIANCE WHEN THERE ARE COMBUSTIBLE GASES IN THE ROOM.

When first igniting products treated with high-temperature paint, it is important to consider the following:

- ♦ the construction materials of the products in question are not homogeneous, in fact cast iron and steel parts coexist.
- ♦ the temperature distribution across the product's body is not uniform: different areas may reach temperatures ranging from 300°C to 500°C;
- ♦ over its lifetime, the product undergoes alternating cycles of ignition and shutdown within the same day, as well as periods of intense use or complete inactivity depending on the season;
- ♦ before being considered fully "broken in", a new product must go through several ignition cycles to allow all materials and the paint to adapt to thermal stress;
- ♦ during the initial ignitions, odours typical of metals exposed to high thermal stress and fresh paint curing, may be emitted.

Therefore, it is extremely important that the following precautions be taken during ignition:

1. Ensure a strong exchange of air in the room where the appliance is installed.
2. On first ignitions, do not overload the combustion chamber (about half the amount indicated in the instruction manual) and keep the product running for at least 6–10 hours continuously, with the dampers less open than indicated in the instruction manual.
3. Repeat this ignition process at least 4–5 times or more, depending on your availability.
4. Gradually increase the load (while adhering to the maximum load recommendations in the instruction manual) and aim for longer ignition periods. Avoid short ignition-shutdown cycles during this initial phase.
5. During operation, no objects must be placed on the appliance, especially on the lacquered surfaces. The lacquered surfaces must not be touched during heating.
6. Once the breaking-in period is complete, the product can be used like a car engine, avoiding sudden overheating with excessive loads.

PREPARING FOR IGNITION

To light the fire, we recommend using small wooden sticks and commercially available fire starters.



NEVER LEAVE THE FIREBOX UNATTENDED DURING THIS PROCEDURE.

LIGHT THE FIRE USING THE TRADITIONAL METHOD

- ♦ Position the ignition damper in cooker mode (HOTPLATE USE-IGNITION USE) to facilitate the exhaust of fumes.
- ♦ Open the throttle valve, if present, on the flue pipe, too.
- ♦ Open the primary and secondary air damper.
- ♦ After igniting the fire with small pieces of firewood and waiting for it to be well lit:
 - ♦ Shut the primary air damper.


FOR THIS SYSTEM, THE DAMPERS MUST BE ADJUSTED DURING IGNITION as follows:

	1A - PRIMARY AIR	2A - SECONDARY AIR	B - IGNITION DAMPER
Figure 8	OPEN	OPEN	HOT PLATE USE-IGNITION USE

LIGHT THE FIRE USING THE METHOD FROM ABOVE (RECOMMENDED)

See **Figure A:**

- To light the fire, place the larger pieces of wood (1) at the bottom;
- On top of the larger pieces (1), arrange smaller pieces of wood (2);
- Place the FIRE STARTER (3) on the top of the stack of wood - this can be, for example, wax-coated wood wool;
- Light the fire starter (3). One match is enough to light the fire.

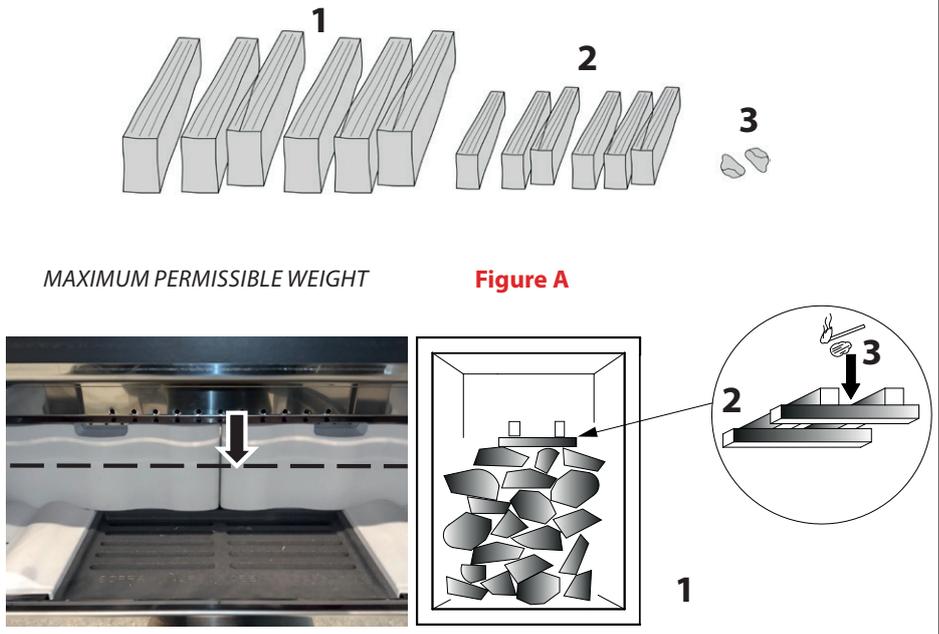

After lighting the fire, position the dampers as indicated in the following table:

	1A - PRIMARY AIR	2A - SECONDARY AIR	B - IGNITION DAMPER
Figure 8	CLOSED	OPEN	HOT PLATE USE-IGNITION USE


PROCEDURE TO ACHIEVE THE RATED HEAT OUTPUT

PREPARING THE BED OF EMBERS

FIRST LOAD:


Use medium-sized pieces of wood (2) according to the hourly consumption specified in the document "CE MARKING INFORMATION".

Reload only when the flame is nearly extinguished.

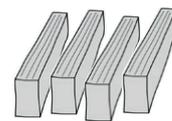

SECOND LOAD:

Use large pieces of wood (1) according to the hourly consumption specified in the document "CE MARKING INFORMATION".

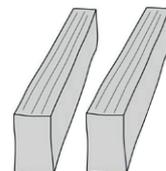

TO AVOID ESCAPING SMOKE, THERE SHOULD BE ONLY EMBERS WHEN THE FIREWOOD IS LOADED.



NEVER OVERLOAD THE APPLIANCE. TOO MUCH FUEL AND COMBUSTION AIR CAN CAUSE OVERHEATING AND THUS DAMAGE THE APPLIANCE. THE WARRANTY DOES NOT COVER DAMAGE DUE TO OVERHEATING OF THE APPLIANCE.




CAUTION: DO NOT EXCEED THE MAXIMUM FIREWOOD LOAD - SEE TECHNICAL DATA AND HOURLY CONSUMPTION IN THE DOCUMENT "CE MARKING INFORMATION".

To achieve nominal operation, a bed of embers approximately 3cm high (20-25% of the nominal load) is required.

If the ember bed is excessive, first stir it with the poker to allow the ash to fall into the ash drawer, then use a metal shovel to remove the excess embers.

The embers must not exceed the reference shown in the figure opposite.

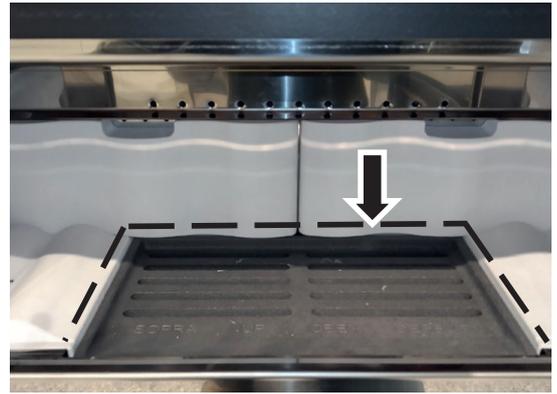

Before positioning the wood, open the primary air damper completely and, using the poker supplied, stir the embers to revive them. Position the fire in the combustion chamber (see LOADING INSTRUCTIONS), close the door and wait up to 3 minutes for the flame to ignite, then adjust the dampers to achieve the rated heat output.

Loading takes approximately 61 minutes.

LOADING INSTRUCTIONS TO ACHIEVE THE RATED HEAT OUTPUT

	RATED HEAT OUTPUT
No. logs	1
Nominal load weight	1.9 kg
Log length	26 cm
Positioning of the logs in the combustion chamber	2 cm from the back of the combustion chamber (see Figure 9)
Log shape	(see Figure 10)

THE DAMPER ADJUSTMENT REQUIRED TO ACHIEVE THE RATED HEAT OUTPUT IS THE FOLLOWING:

	1A - PRIMARY AIR	2A - SECONDARY AIR	B - IGNITION DAMPER
Figure 8	OPEN (POSITION SEE Figure 8)	OPEN	OVEN USE-HEATING USE

Loading is complete when, after loading, the combined weight of the ember and ash bed does not differ by more than 100g from the weight of the previous load.

THE USE OF THERMAL INSULATION ACCORDING TO ENERGY-SAVING REGULATIONS INCREASES THE HEATED VOLUME. IN THE CASE OF TEMPORARY HEATING WITH INTERRUPTIONS OF MORE THAN 8 H, THE HEATING CAPACITY DECREASES BY APPROXIMATELY 25%.

THE TECHNICAL DATA DECLARED IN THE DOCUMENT "CE MARKING INFORMATION" WERE OBTAINED USING BEECH WOOD ESSENCE OF CLASS "A1" AS PER STANDARD UNI EN ISO 17225-5 AND WITH HUMIDITY BELOW 20%. THE USE OF OTHER WOOD TYPES MAY REQUIRE SPECIFIC ADJUSTMENTS AND COULD RESULT IN DIFFERENT PRODUCT PERFORMANCE.

Position of logs



Figure 9

Log shape



Figure 10

ALWAYS USE THE PRODUCT WITH THE DOOR CLOSED TO AVOID DAMAGE DUE TO OVERHEATING (FORGING EFFECT). FAILURE TO DO SO WILL INVALIDATE THE WARRANTY.



FOR SAFETY REASONS, THE FIREBOX DOOR MAY ONLY BE OPENED DURING FUEL LOADING. THE FIREBOX MUST REMAIN CLOSED DURING OPERATION AND PERIODS OF NON-USE.

HOW TO CONFIGURE THE MACHINE FOR WATER BOILING

- ◆ Turn the IGNITION DAMPER B to the cooker position (OVEN USE-HEATING USE) see (Figure 8).
- ◆ Primary Air 1A fully open.
- ◆ Secondary Air 2A fully open.
- ◆ Load wood according to the hourly consumption specified in the document "CE MARKING INFORMATION".
- ◆ Wait for the oven to reach a temperature of 230°C (+/-30°C).

HOW TO CONFIGURE THE MACHINE FOR COOKIE BAKING

- ◆ Turn the ignition damper B to the cooker position (OVEN USE-HEATING USE).
- ◆ Primary Air 1A fully open.
- ◆ Secondary Air 2A fully open.
- ◆ Wait for the oven to reach a temperature of 200°C, without adding more wood.
- ◆ Set the Primary Air damper 1A to the position to achieve the RATED HEAT OUTPUT. SEE (Figure 8).
- ◆ Insert the tray of biscuits on the second shelf from the bottom for 20 minutes.
- ◆ Load pieces of wood weighing 1 kg.
- ◆ Turn the tray around when half cooked, if necessary.

NEVER OVERLOAD THE APPLIANCE. TOO MUCH FUEL AND COMBUSTION AIR CAN CAUSE OVERHEATING AND THUS DAMAGE THE APPLIANCE. DAMAGE CAUSED BY OVERHEATING IS NOT COVERED BY WARRANTY. ALWAYS USE THE PRODUCT WITH THE DOOR CLOSED TO AVOID DAMAGE DUE TO OVERHEATING (FORGING EFFECT).

IN ADDITION TO THE COMBUSTION AIR ADJUSTMENT, THE COMBUSTION INTENSITY AND THEREFORE THE HEAT OUTPUT IS AFFECTED BY THE CHIMNEY. A HIGH CHIMNEY DRAUGHT REQUIRES LESS COMBUSTION AIR, WHILE A LOW DRAUGHT REQUIRES MORE COMBUSTION AIR.

To check for efficient combustion, observe the smoke coming from the chimney – it should be clear. If it is white, it means that the appliance is not properly adjusted or the firewood is too wet; if, on the other hand, the smoke is grey or black, it is a sign that combustion is not complete (more secondary air is needed).



WHEN ADDING FUEL ONTO EMBERS IN THE ABSENCE OF FLAMES, A HIGH LEVEL OF SMOKE MAY BE PRODUCED. IF THIS OCCURS, AN EXPLOSIVE MIXTURE OF GAS MAY FORM, WHICH, IN EXTREME CASES, COULD LEAD TO AN EXPLOSION. FOR SAFETY REASONS, A NEW IGNITION PROCEDURE SHOULD BE PERFORMED USING SMALL STRIPS.

USING THE OVEN (IF PRESENT)

The oven is equipped with a light; the lamp is turned on by pulling out lever C slightly. To replace it, refer to the chapter (OVEN LAMP REPLACEMENT).

Place the Ignition damper B in the position (OVEN USE-HEATING USE) (see chap. TECHNICAL DESCRIPTION).

The oven temperature can be significantly affected by the intake of combustion air. A sufficient chimney draught and proper cleaning of the ducts to promote the flow of otherwise harmful fumes around the oven, are essential for best cooking results.

The oven pan and oven grate can be positioned on different levels.

Thick cakes and large roasts must be inserted on the bottom level. Flat cakes and biscuits go on the middle level. The top level can be used for heating or browning.

WHEN COOKING VERY MOIST FOODS, CAKES WITH FRUIT OR FRUIT ITSELF, CONDENSATE IS PRODUCED.

DURING COOKING, AQUEOUS VAPOUR MAY FORM, WHICH IS THEN DEPOSITED ON THE TOP OR SIDE OF THE DOOR, FORMING CONDENSATE DROPLETS. THIS IS A NATURAL PHENOMENON.

CAUTION SYMBOL WITH HAND:

Act on the STEAM RELIEF VALVE before TURNING ON THE COOKER, to avoid possible burns; if this is not enough, open the door briefly and carefully (once or twice, more often for longer cooking times) to allow the steam to escape from the cooking chamber and to significantly reduce the formation of condensate.

TO FIND OUT WHERE YOUR NEAREST SERVICE CENTRE IS, CONTACT YOUR DEALER OR VISIT THE WEBSITE:
WWW.LANORDICA-EXTRAFLAME.COM

MAINTENANCE AND CARE

FOLLOW ALL THE INSTRUCTIONS WITH MAXIMUM SAFETY:

- ◆ ENSURE THE POWER CORD (WHERE PRESENT) IS UNPLUGGED.
- ◆ THAT THE HEATER AND ALL ITS PARTS HAVE COOLED.
- ◆ THAT THE ASHES HAVE FULLY COOLED.
- ◆ ENSURE EFFICIENT AIR EXCHANGE IN THE ROOM WHEN CLEANING THE PRODUCT.

REGULAR CLEANING UNDER THE USER'S RESPONSIBILITY

The periodic cleaning operations, as indicated in this use and maintenance manual, must be performed with the utmost care after reading the instructions, procedures and regularity described herein.

POOR CLEANING NEGATIVELY AFFECTS THE PERFORMANCE AND SAFETY OF THE PRODUCT!

CHECK AND CLEAN THE FRESH AIR INTAKE AT LEAST ONCE A YEAR. THE CHIMNEY MUST BE REGULARLY SWEEP BY THE CHIMNEY SWEEP. HAVE YOUR LOCAL CHIMNEY SWEEP CHECK THE PROPER INSTALLATION OF THE PRODUCT, CONNECTION TO THE CHIMNEY AND VENTILATION.



CLEANING AND MAINTENANCE MUST ONLY BE PERFORMED WHEN THE APPLIANCE IS COLD. USE ONLY SPARE PARTS EXPRESSLY AUTHORISED AND SUPPLIED BY LA NORDICA S.P.A. PLEASE CONTACT YOUR SPECIALISED RETAILER IF YOU REQUIRE SPARE PARTS. NO CHANGES MUST BE MADE TO THE APPLIANCE!!!

CLEANING THE GLASS

A specific secondary air inlet effectively slows down the formation of dirt deposits on the door glass. However, such deposits can never be avoided with the use of solid fuels (e.g. damp firewood) and are not to be regarded as a defect of the appliance .



THE PANORAMIC GLASS MUST ONLY BE CLEANED WHEN THE APPLIANCE IS COLD TO PREVENT IT FROM EXPLODING. FOR CLEANING, SPECIFIC PRODUCTS CAN BE USED OR, IT IS POSSIBLE TO USE A SCRUNCHED UP BALL OF NEWSPAPER (NON-COATED PAPER) SLIGHTLY MOISTENED AND DIPPED IN THE ASH. HOWEVER, DO NOT USE ABRASIVE OR CHEMICALLY AGGRESSIVE CLOTHS OR PRODUCTS.

Proper ignition, the right type and amount of fuel, the correct setting of the secondary air damper, a suitable chimney draught and steady supply of combustion air are all essential for the optimal performance of the appliance and in keeping the glass clean.



GLASS BREAKAGE: THE GLASS PANELS INSTALLED ARE MADE OF GLASS-CERAMIC, DESIGNED TO WITHSTAND TEMPERATURES UP TO 750°C. THANKS TO THESE CHARACTERISTICS, THEY ARE NOT SUBJECT TO BREAKAGE CAUSED BY THERMAL SHOCK DURING THE NORMAL OPERATION OF THE APPLIANCE. ANY BREAKAGE CAN OCCUR ONLY AS A RESULT OF MECHANICAL IMPACTS, SUCH AS, FOR EXAMPLE: DIRECT IMPACTS ON THE GLASS, SLAMMING THE DOOR VIOLENTLY, ETC. PLEASE NOTE THAT THIS KIND OF DAMAGE IS NOT COVERED BY THE WARRANTY.

CLEANING THE ASH DRAWER

All products have a firebox grate and ash drawer (**Figure 11**). We recommend that you periodically empty the ash drawer and avoid filling it completely, so as not to overheat the grate. Moreover, it is suggested to always leave 3-4 cm of ash in the firebox.



CAUTION: THE ASHES REMOVED FROM THE FIREBOX MUST BE STORED IN A CONTAINER MADE OF FIREPROOF MATERIAL FITTED WITH AN AIRTIGHT COVER. THE CONTAINER MUST BE PLACED ON A FIREPROOF FLOOR, AWAY FROM FLAMMABLE MATERIALS UNTIL THE ASH IS EXTINGUISHED AND FULLY COOLED.

CLEANING THE FLUE

THE APPLIANCE SHOULD BE THOROUGHLY CLEANED AT LEAST ONCE A YEAR OR WHENEVER REQUIRED (IN CASE OF POOR PERFORMANCE AND LOW OUTPUT). EXCESSIVE SOOT (CREOSOTE) DEPOSITS CAN LEAD TO PROBLEMS IN THE FLUE EXHAUST AND TO FLUE FIRES.



CLEANING MUST ONLY BE CARRIED OUT WHEN THE APPLIANCE IS COLD. THIS PROCEDURE SHOULD BE CARRIED OUT BY A CHIMNEY SWEEP, WHO CAN PERFORM AN INSPECTION AT THE SAME TIME.


During cleaning, the ash drawer (1) and baffle (2) must be removed from the appliance to help remove the soot. The baffles can be easily extracted from their seats since they are not fastened using screws. Once they have been cleaned, they must be repositioned in their seats (**Figure 11**).

Figure 11


1 - ASH DRAWER




ACCESS TO THE FLUE PASSAGE UNDER THE OVEN

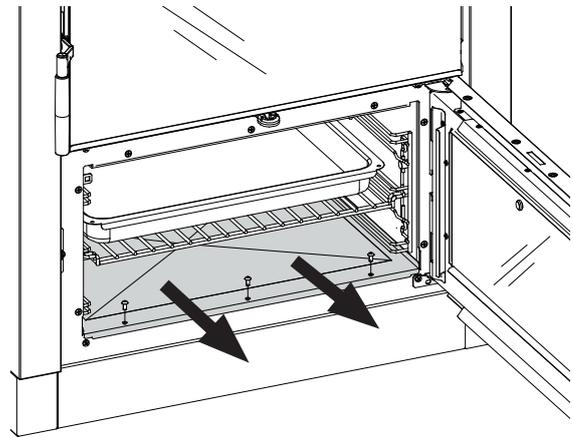

2 - SMOKE BAFFLE

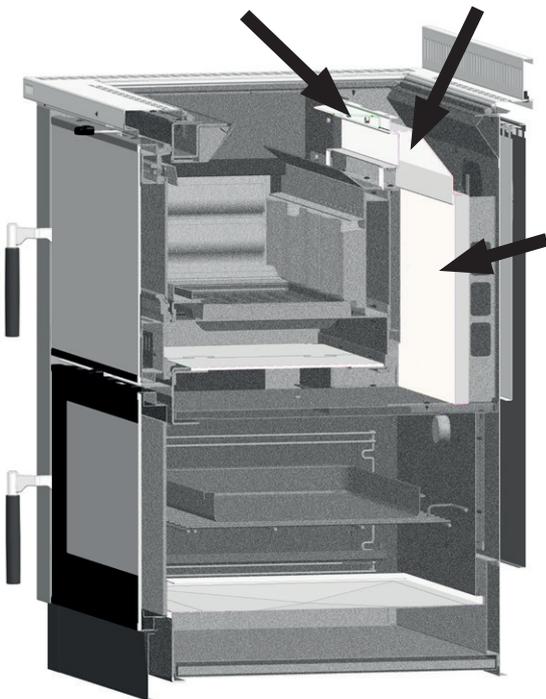

ACCESS TO THE FLUE PASSAGE ABOVE THE OVEN

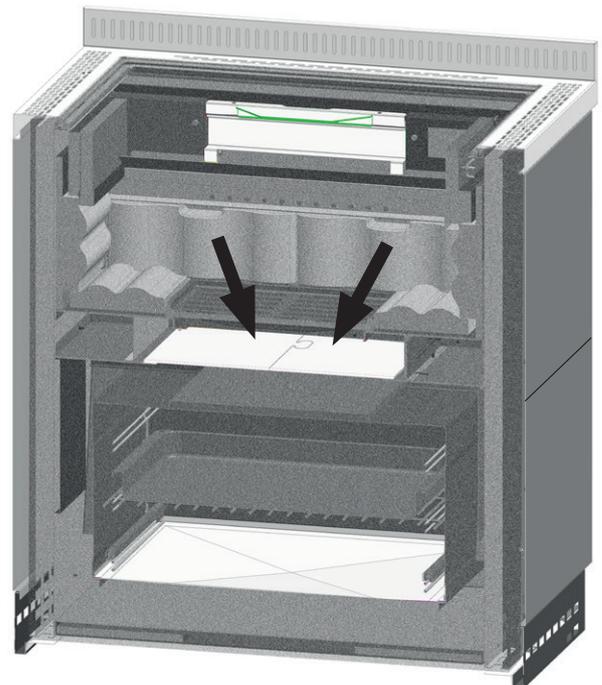

THE ABSENCE OF THE SMOKE BAFFLE CAUSES A STRONG VACUUM WITH EXCESSIVELY RAPID COMBUSTION, EXCESSIVE FIREWOOD CONSUMPTION AND RELATIVE OVERHEATING OF THE APPLIANCE.

MAJOLICA (IF PRESENT)

LA NORDICA S.p.A. majolica tiles are the result of high-quality craftsmanship and as such may present micro-crackling, crazing or colour imperfections. These characteristics attest to its high-quality nature. Enamel and majolica, due to their varying expansion coefficients, produce micro-crackling (crazing) that demonstrate their authenticity.



WHEN CLEANING THE TILES, IT IS RECOMMENDED TO USE A SOFT, DRY CLOTH; IF ANY DETERGENT OR LIQUID IS USED, THIS MAY PENETRATE INTO THE CAVITIES AND PERMANENTLY EXPOSE THEM.

NATURAL STONE PRODUCTS (IF PRESENT)

NATURAL STONE IS CLEANED WITH VERY FINE SANDPAPER OR ABRASIVE SPONGE. **DO NOT** USE DETERGENTS OR LIQUIDS.

PAINTED PRODUCTS (IF PRESENT)

After years of using the product, colour changes of painted parts is a completely natural phenomenon. This phenomenon is due to the considerable temperature variations to which the product is subject when it is in operation and to the ageing of the paint itself over time.



BEFORE THE APPLICATION OF NEW PAINT, ANY RESIDUE MUST BE CLEANED AND REMOVED FROM THE SURFACE TO BE PAINTED.

ENAMELLED PRODUCTS (IF PRESENT)

To clean the enamelled parts, use soapy water or a neutral, **NON-ABRASIVE, NON-CHEMICALLY AGGRESSIVE DETERGENT**, at a cold temperature.




AFTER CLEANING, DO NOT LEAVE THE SOAPY WATER OR DETERGENT TO DRY – REMOVE THEM IMMEDIATELY. DO NOT USE SANDPAPER OR STEEL WOOL.

CHROME-PLATED COMPONENTS (IF PRESENT)

If the chrome-plated components turn bluish due to overheating, this can be resolved using a suitable cleaning product.

CLEANING THE FIREBOX GRATE

IMPORTANT: If for any reason the grate is removed from the firebox, it is **IMPORTANT**, when replacing it, that the flat part with the narrower ash passages be facing upwards; failure to do so would make it difficult to remove the ash from the grate (see figure opposite).

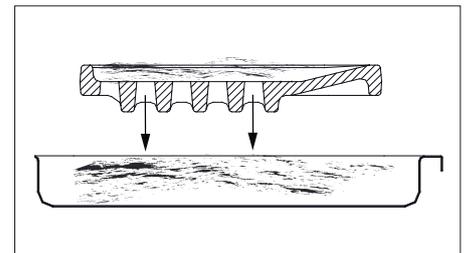

SIDE HANDRAIL (IF PRESENT)

The handles, handrail and water tray (stoves) must be cleaned with a soft cloth and some alcohol, when cooled. **DO NOT** use abrasives or thinners.

CAST IRON CENTRE PLATE AND RINGS



IMPORTANT: TO PREVENT THE FORMATION OF RUST, DO NOT LEAVE POTS AND PANS ON THE COLD COOKING PLATE. THIS COULD CAUSE UNSIGHTLY AND HARD-TO-REMOVE RUST STAINS! THE CAST IRON CENTRE PLATE (CAST IRON COOKING PLATE) AND THE CAST IRON RINGS MUST BE PERIODICALLY SANDED WITH 150-GRIT SANDPAPER ATTENTION: DO NOT SAND THE ENAMELLED PARTS.

During cleaning, the flue gas exhaust stub and flue gas pipe must be detached from the stove. The flue gas compartment can be cleaned from the front of the oven (see chapter: CLEANING THE OVEN FLUE GAS PASSAGE), or from the top. To this end, remove the rings and cooking plate and detach the flue gas pipe from the exhaust stub. Cleaning can be performed using a brush and vacuum cleaner.



CAUTION AFTER CLEANING, ALL DISASSEMBLED PARTS MUST BE REASSEMBLED IN AN AIRTIGHT MANNER.

STAINLESS STEEL FRAME (IF PRESENT)

When repositioning the cast iron cooking plate, check that there is always a 3 mm gap between it and the stainless steel frame to allow for different thermal expansions and to prevent colour alterations to the stainless steel frame during heating.

STAINLESS STEEL COMPONENTS

When the appliance is cold, clean the stainless steel parts with a neutral, NON-abrasive detergent. For stubborn stains, use vinegar. Then dry everything thoroughly with a soft cloth. DO NOT use sandpaper or steel wool.



IMPORTANT: TO PREVENT RUST FROM FORMING WHEN THE APPLIANCE IS NOT USED FOR A LONG PERIOD OF TIME, IT IS ADVISABLE TO SLIGHTLY GREASE THE CLEAN FRAME WHEN IT IS WARM (WITH PETROLEUM JELLY, PARAFFIN OIL, SEWING MACHINE OIL OR GUN OIL). OF COURSE, BEFORE USING IT AGAIN, THE FRAME MUST BE CLEANED. DO NOT LEAVE POTS OR PANS ON THE COLD FRAME. THIS COULD CAUSE UNSIGHTLY AND HARD-TO-REMOVE RUST STAINS!

OVEN MAINTENANCE (IF PRESENT)

TO PREVENT THE FORMATION OF RUST, IT IS RECOMMENDED TO:

- ◆ Use the steam relief valve D (see **Figure 8**)
- ◆ Free the steam from the oven to reduce the formation of any condensate by briefly and carefully opening the door (once or twice, or more often when cooking very moist foods or for extended cooking times);
- ◆ Remove the food from the oven once cooked. Leaving the food to cool inside the oven under 150°C causes condensation;
- ◆ At the end of cooking, leave the oven door partially open to dry up any condensate;
- ◆ If moisture has formed inside the oven, it is recommended to treat the inner side of the cast iron door (where present) with neutral petroleum jelly.
- ◆ Repeat the treatment with neutral petroleum jelly on the inner side of the cast iron door every 3–6 months, depending on how frequently the oven is used;
- ◆ If rust has formed on the inner side of the cast iron door, remove it using an abrasive material, then treat the cast iron surface with neutral petroleum jelly.

CLEANING THE OVEN FLUE PASSAGE

To clean the flue passage above the oven, it is necessary to remove the ash drawer and the two metal panels that form the base of the ash drawer.

To clean the flue passage below the oven, it is necessary to remove the oven base, which is secured with appropriate screws (see **Figure 11**). Cleaning can be performed using a brush and vacuum cleaner.



IMPORTANT: CHECK THAT THE POSITION OF THE SMOKE BAFFLES IS AS SHOWN IN **FIGURE 11.**



CAUTION AFTER CLEANING, ALL DISASSEMBLED PARTS MUST BE REASSEMBLED IN AN AIRTIGHT MANNER.

REPLACING THE OVEN LAMP

Make sure that the appliance is completely cold; this operation must be performed with the electrical power supply completely disconnected!!

After disconnecting the electrical power supply, replace the bulb inside the oven as shown in the figure in the INSTALLATION chapter. Follow all the instructions with maximum safety!!

Use a replacement bulb with the technical specifications indicated in the figure in the INSTALLATION chapter.

SUMMER SHUTDOWN

After cleaning the firebox, chimney and flue, ensuring that all ash and any other residue have been removed, all doors and relative firebox dampers should be closed. If the appliance is disconnected from the chimney, the outlet hole should be closed.

IT IS ADVISABLE TO CLEAN THE FLUE AT LEAST ONCE A YEAR; AT THE SAME TIME CHECK THE ACTUAL CONDITION OF THE GASKETS, WHICH, IF NOT PERFECTLY INTACT - I.E. NO LONGER ADHERING TO THE PRODUCT - WOULD NOT GUARANTEE THE PROPER FUNCTIONING OF THE APPLIANCE! REPLACEMENT WOULD THEREFORE BE NECESSARY.




IF THE APPLIANCE IS INSTALLED IN A DAMP ROOM, PLACE ABSORBENT SALTS INSIDE THE FIREBOX. TO PRESERVE THE APPEARANCE OF THE APPLIANCE OVER TIME, PROTECT CAST-IRON PARTS WITH NEUTRAL VASELINE.

CAUSES AND REMEDIES

PROBLEM	POSSIBLE CAUSES	POSSIBLE SOLUTIONS
The cooker frame or stainless steel parts change colour	<ul style="list-style-type: none"> Supply pressure (draught) too high in the flue 	<ul style="list-style-type: none"> Clean the surfaces; Contact a chimney sweep to have an AUTOMATIC DRAUGHT REGULATOR installed if necessary, if this is not possible, install a butterfly valve in accordance with current regulations.
The oven warps and the enamel chips	<ul style="list-style-type: none"> Supply pressure (draught) too high in the flue 	<ul style="list-style-type: none"> Minor damage to the enamel does not compromise correct operation. If there is more significant damage, contact the Service Centre; Contact a chimney sweep to have an AUTOMATIC DRAUGHT REGULATOR installed if necessary, if this is not possible, install a butterfly valve in accordance with current regulations.
Rust on the steel cooking plate	<ul style="list-style-type: none"> A light layer of rust on the entire surface of the cooking plate may be caused by air humidity (steam from cooking) 	<ul style="list-style-type: none"> Grind the surface; With the cooking plate warm, grease the surface with non-acidic grease (petroleum jelly or paraffin oil); Only with the cooking plate warm, clean with a damp cloth;

DISPOSAL

INFORMATION ON THE DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT CONTAINING BATTERIES AND ACCUMULATORS

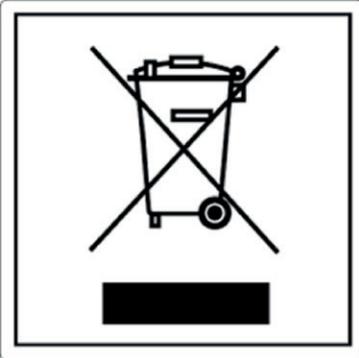

This symbol, which appears on the product, on batteries, on accumulators or on their packaging or in their documentation, indicates that the product, and the batteries or accumulators included in it, must not be collected, recovered or disposed of with household waste at the end of their service life.

The improper disposal of electrical and electronic equipment, batteries or accumulators may result in the release of dangerous substances contained in the products. In order to prevent potential damage to the environment or to human health, users are advised to separate this equipment, and/or the batteries or accumulators included in it, from other types of waste and deliver them to a municipal collection centre. It is possible to ask the distributor to collect waste electrical and electronic equipment under the conditions and according to the procedures set out in Italian Legislative Decree 49/2014.

The separate collection and proper treatment of electrical and electronic equipment, batteries and accumulators help preserve natural resources, protect the environment and safeguard health. For further information on collection centres for waste electrical and electronic equipment, batteries and accumulators, contact the relevant public authorities responsible for issuing permits.

**TO FIND OUT WHERE YOUR NEAREST SERVICE CENTRE IS, CONTACT YOUR DEALER OR VISIT THE WEBSITE:
WWW.LANORDICA-EXTRAFLAME.COM**

ROUTINE MAINTENANCE PERFORMED BY QUALIFIED TECHNICIANS

ROUTINE MAINTENANCE MUST BE PERFORMED AT LEAST ONCE A YEAR.

SINCE THE HEATER USES FIREWOOD AS A SOLID FUEL, ANNUAL ROUTINE MAINTENANCE IS REQUIRED, WHICH MUST BE CARRIED OUT BY A QUALIFIED TECHNICIAN, USING ONLY ORIGINAL SPARE PARTS.

FAILURE TO COMPLY MAY JEOPARDISE SAFETY OF THE APPLIANCE AND INVALIDATE THE WARRANTY CONDITIONS.

Observing the cleaning frequencies reserved for the user as described in the use and maintenance manual will ensure the heater's proper combustion over time, avoiding any anomalies and/or malfunctions that could require additional call-outs.

REQUESTS FOR ROUTINE MAINTENANCE ARE NOT COVERED BY THE PRODUCT WARRANTY.

GASKETS

The gaskets ensure the airtightness and proper functioning of the product.

THEY MUST BE REGULARLY CHECKED. THEY MUST BE REPLACED IMMEDIATELY IF THEY ARE WORN OR DAMAGED.

THESE OPERATIONS MUST BE PERFORMED BY A QUALIFIED TECHNICIAN.

CONNECTION TO THE CHIMNEY

ANNUALLY, OR WHENEVER THE DUCT LEADING TO THE CHIMNEY NEEDS TO BE VACUUMED AND CLEANED. IF THERE ARE HORIZONTAL SECTIONS, REMOVE ANY RESIDUE BEFORE IT OBSTRUCTS THE PASSAGE OF SMOKE.

EN 16510-1 Symbol	EXPLANATION
<i>nom</i>	Nominal heat output
<i>part</i>	Part load heat output
<i>CON / INT</i>	Appliance operation, Continuous (CON) or Intermittent (INT)
$CO_{2\text{nom}} / CO_{2\text{part}}$	Carbon dioxide emission
$CO_{\text{nom}} / CO_{\text{part}}$	Carbon monoxide emission
d_B	Minimum distances to combustibile materials - bottom
d_C	Minimum distances to combustibile materials - ceiling
d_F	Minimum distances to combustibile materials - floor in front
d_L	Minimum distances to combustibile materials - side radiation area
d_{non}	Minimum distances to non-combustibile walls
d_{out}	Flue gas exhaust pipe
d_p	Minimum distances to adjacent combustibile materials - front
d_R	Minimum distances to combustibile materials - rear
d_s	Minimum distances to combustibile materials - side
<i>E, f</i>	Power supply voltage, frequency
<i>EEl</i>	Energy Efficiency Index
el_{max}	Consumption of electrical auxiliary energy at nominal heat output
el_{min}	Consumption of electrical auxiliary energy at part load heat output
el_{SB}	Consumption of electrical auxiliary energy at standby
<i>H</i>	Appliance height overall
<i>L</i>	Appliance depth overall
<i>m</i>	Net weight
m_{chim}	Maximum load of a chimney the appliance max carry
$m_{h\text{nom}} / m_{h\text{part}}$	Hourly consumption
$NO_{x\text{nom}} / NO_{x\text{part}}$	Nitrogen oxides emission
$OGC_{\text{nom}} / OGC_{\text{part}}$	Emission of organic gaseous carbon
$PM_{\text{nom}} / PM_{\text{part}}$	Particulate matter emissions
$P_{\text{nom}} / P_{\text{part}}$	Heat output
$p_{\text{nom}} / p_{\text{part}}$	Minimum flue draught
$P_{\text{SHnom}} / P_{\text{SHpart}}$	Space heat output
P_W	Permissible maximum water operating pressure
$P_{W\text{nom}} / P_{W\text{part}}$	Water heat output
<i>s</i>	Thickness of the protective insulation material
T_{class}	Chimney designation
$T_{f,g\text{nom}} / T_{f,g\text{part}}$	Mean flue gas temperature
$T_{s\text{nom}} / T_{s\text{part}}$	Flue gas outlet temperature
<i>W</i>	Appliance width overall
W_{max}	Maximum electric power input
$\eta_{\text{nom}} / \eta_{\text{part}}$	Efficiency
η_s	Seasonal space heating efficiency at nominal heat output
$\Phi_{f,g\text{nom}} / \Phi_{f,g\text{part}}$	Flue gas mass flow
<i>Wood Pellet (L)</i>	Wood Pellet
<i>Wood Logs (l)</i>	Wood Logs
	Read and follow the user operating instructions



Riscalda la vita.

La NORDICA S.p.A. Via Summano, 104 36030 - MONTECCHIO PRECALCINO (VI) - ITALY
☎ +39.0445.804000 - 📠 +39.0445.804040 - ✉ info@lanordica.com - 🌐 www.lanordica-extraflame.com

MADE IN ITALY
design & production

*TO FIND THE SERVICE CENTRE NEAREST TO YOU
CONTACT YOUR DEALER OR CONSULT
THE SITE WWW.LANORDICA-EXTRAFLAME.COM*

The manufacturer reserves the right to vary the characteristics and the data reported in this pamphlet at any moment and without notice, in order to improve its products.